


Schublade 1700 / Montagesatz mit 11E9290
Drawer 1700 / Assembly-kit with 11E9290
Tiroir 1700 / Assemble-kit avec 11E9290



ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

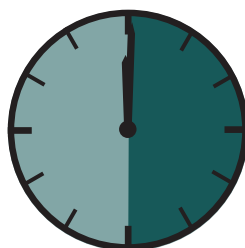

90 Minuten

article-no:
006085 black Steel

Revision 9: 06.02.2019




Schublade 1700 / Montagesatz mit 11E9290


Drawer 1700 / Assembly-kit with 11E9290

Tiroir 1700 / Assemble-kit avec 11E9290

Required tools / Benötigte Werkzeuge / Outillage requis

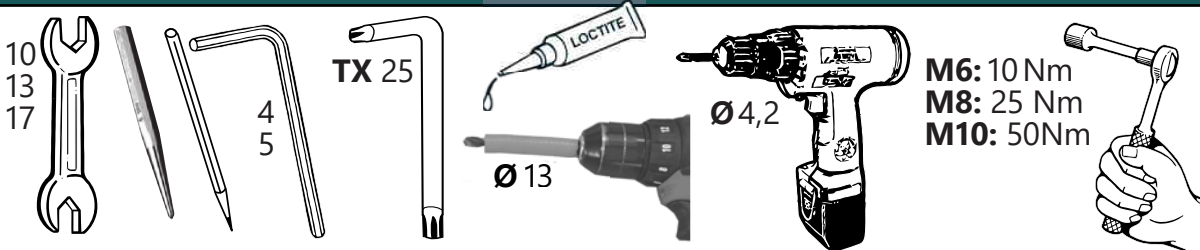

Parts list/Teileliste/Lista de accesorios

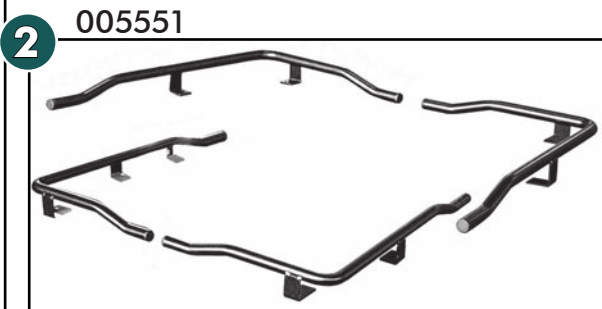



a		ø5,5x25; DIN 7976	2x
b		M6x30; DIN 7991	14x
c		M6x12; ~ISO7380	10x
d		M6x25; ~ISO7380	8x
e		M6x20; DIN 933	2x
f		M8x20; DIN 933	2x
g		M6 weld nut/Anschweißmutter/ soudure écrou	10x
i		ø6,4; DIN 9021	6x
m		M6; DIN 985 Zn	2x
n		M6; DIN 934 Zn	14x

8 ø9; 005497 **2x** **9** ø6,6; 005495 **14x**



Assembly-kit / Montagesatz / Assemble-kit

11E9290

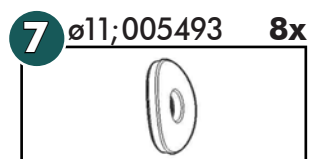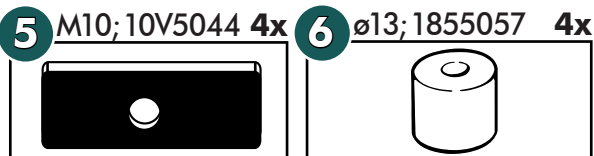


o		M10x60; DIN 933	4x
p		M10; DIN 934	4x

article-no:
006085 black Steel

Revision 9: 06.02.2019



Schublade 1700 / Montagesatz mit 11E9290
Drawer 1700 / Assembly-kit with 11E9290
Tiroir 1700 / Assemble-kit avec 11E9290

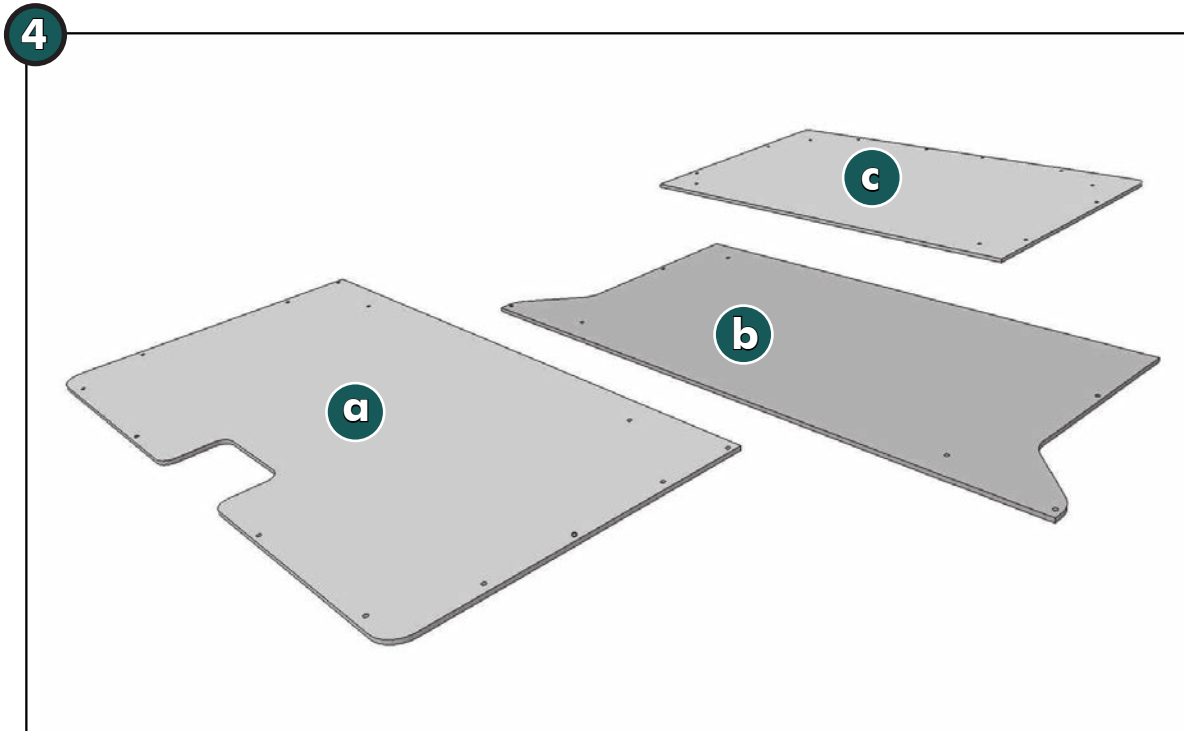









Artikel-Nr. Item-Nr. numéro d'article	KFZ Hersteller auto- motive manufacturer constructeur automo- bile	Bezeichnung designation désignation	Modell model modèle	Holzauflagen timber vehicle part exigences bois
1665690N	Nissan	Navara D40 King Cab NP300 Navara D23 King Cab without bedliner*	ab 2005 ab 2016	005566N
13R5690N	Nissan	NP 300 King Cab	04/2008	005566N
1935690N	Isuzu	D MAX Space Cab	2007	005566N
10V5690N	Mitsubishi	L200 Club Cab	2006	005566N
11K5690N	Madza	BT50 Freestyle Cab (L Cab) RAB Cab)	2006 / 2009	005566N
11K5690N	Ford	Ranger Superkabine (Extrakabine)	2009	005566N
15V5690N 15V5590N	Ford	Ranger Extrakabine (Extra Cab) Ranger Extra Cab (XC)	2012 2016	007770N 007788N
17W5690N	Mitsubishi	L200 Club Cab,(KJ0T)	2016	007783N
17W5690N	Fiat	Fullback Extended Cab	2016	007783N
11E5490N	Toyota	Hilux Xtra Cab	2016	007790N

***without bedliner**
ohne Laderaumwanne !
sans doublure de caisse ■

article-no:
006085 black Steel

Revision 9: 06.02.2019











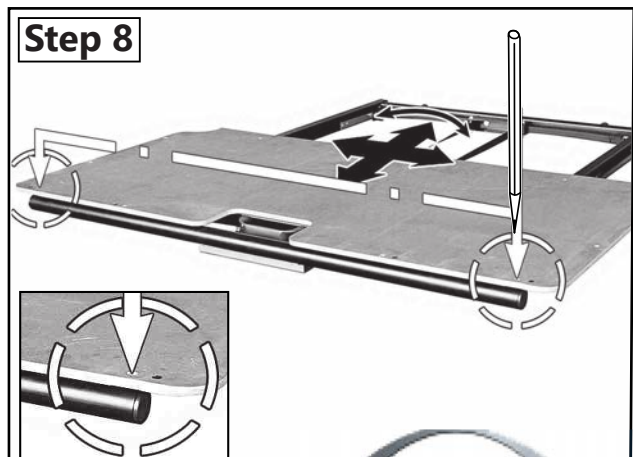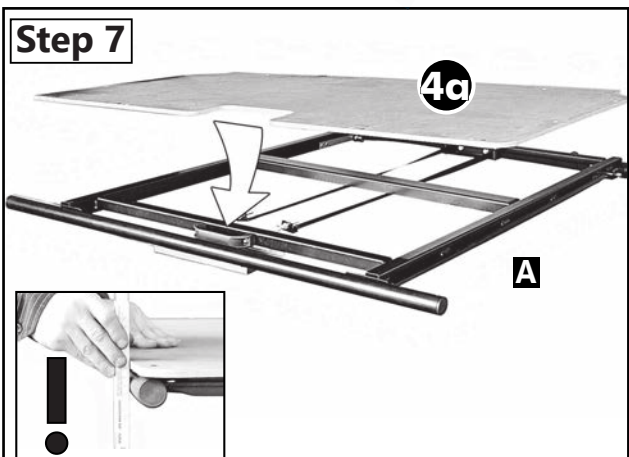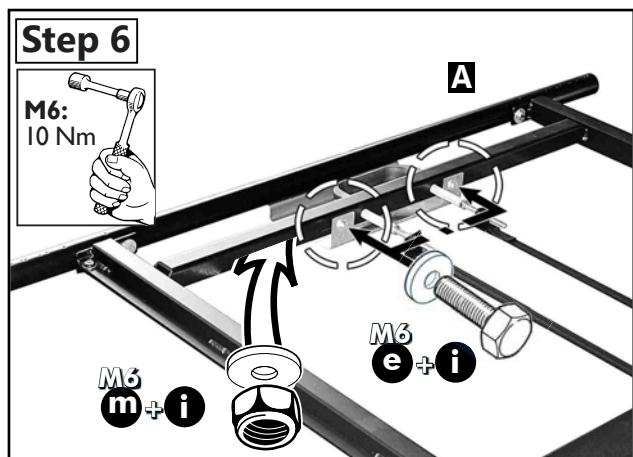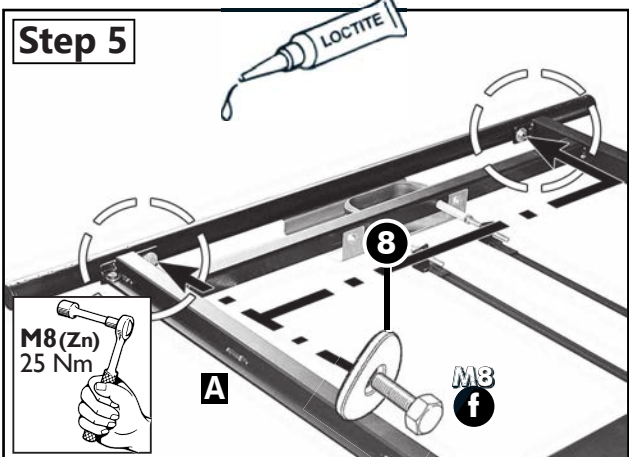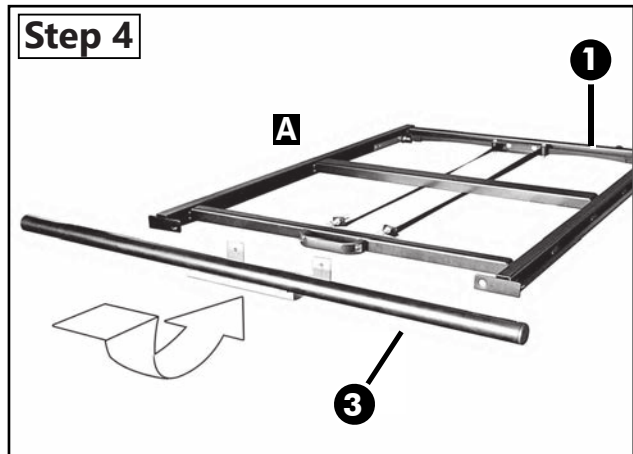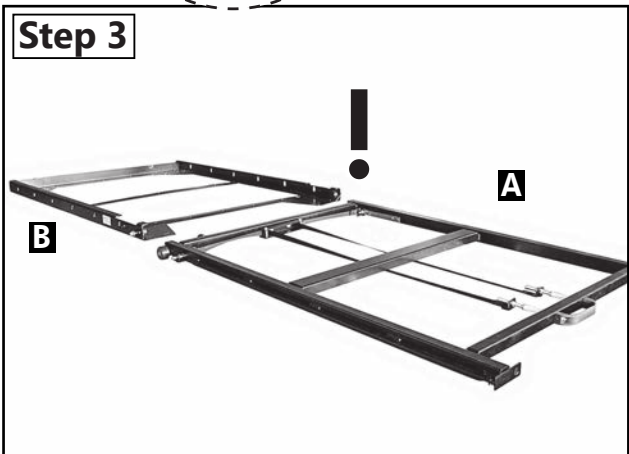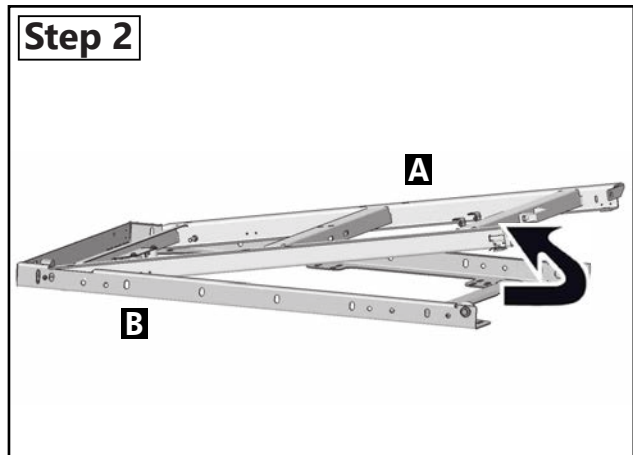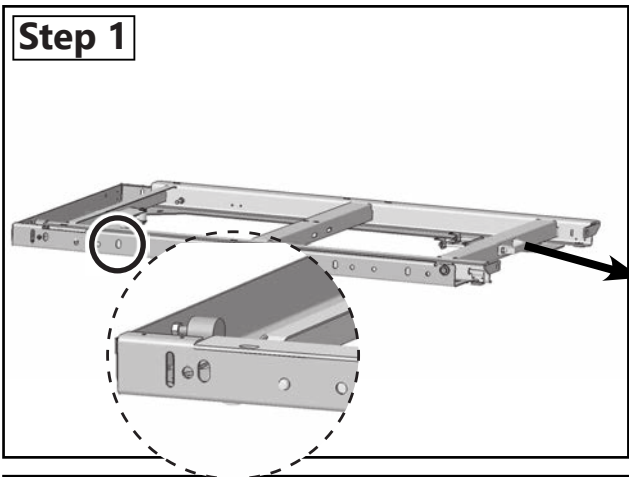

article-no:
006085 black Steel

Revision 9: 06.02.2019










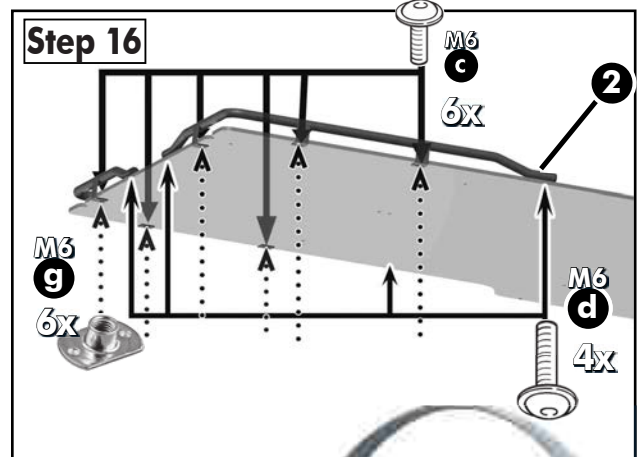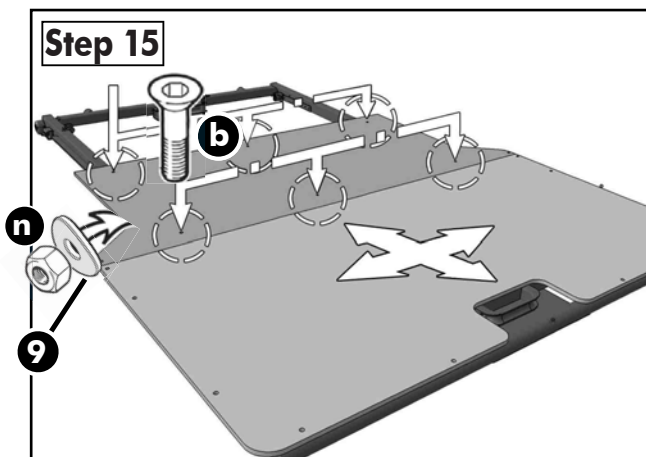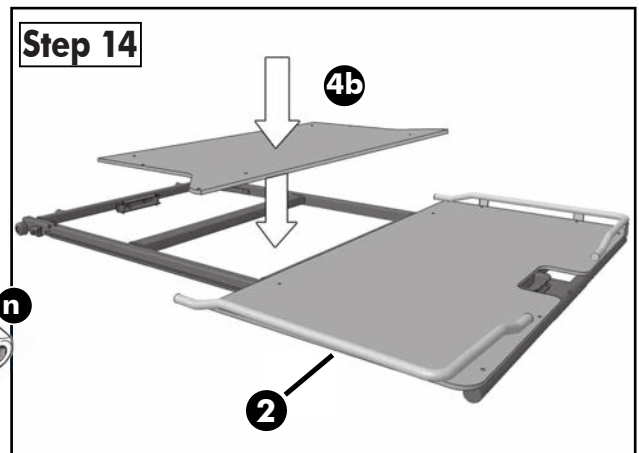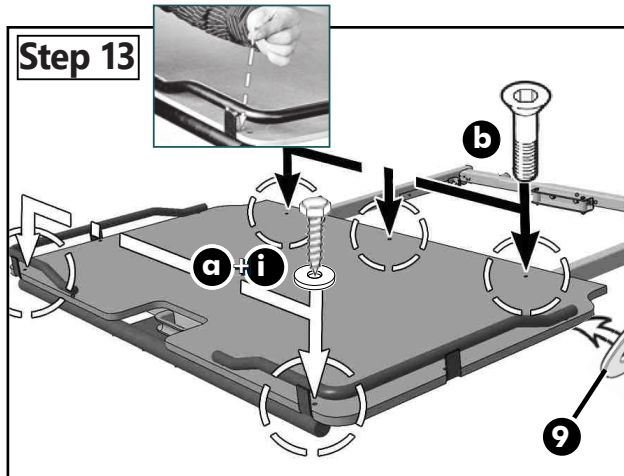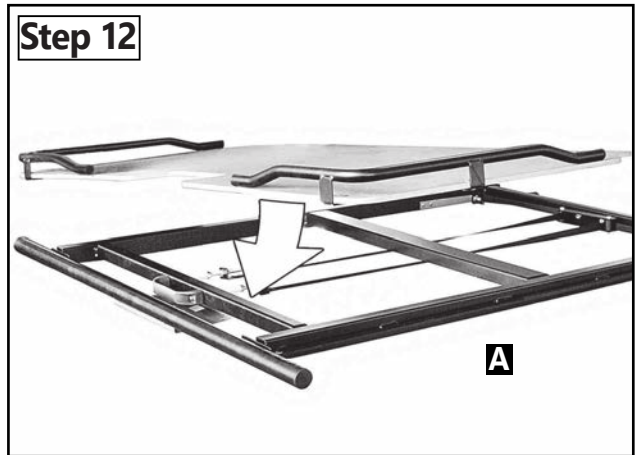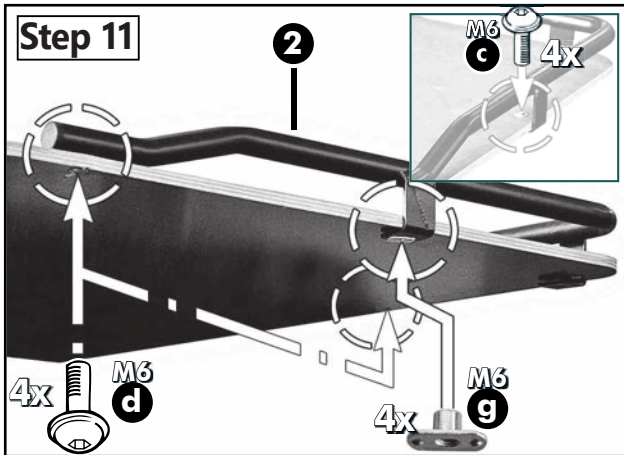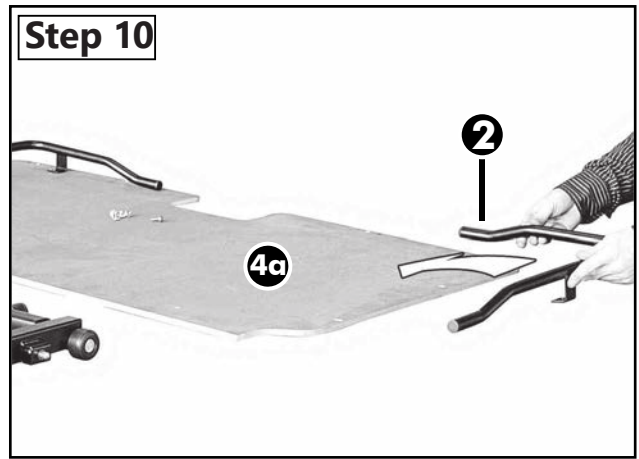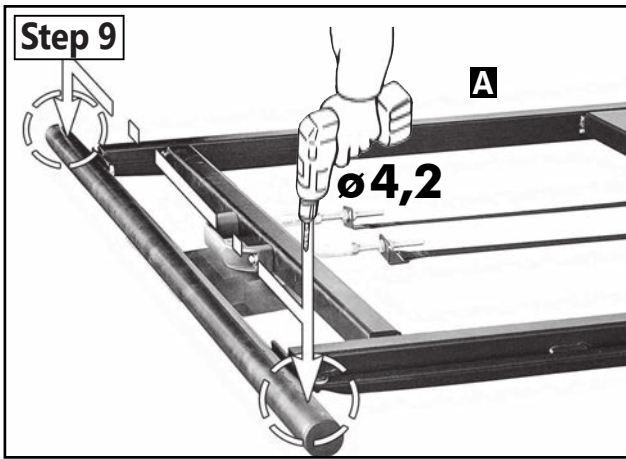

article-no:
006085 black Steel

Revision 9: 06.02.2019








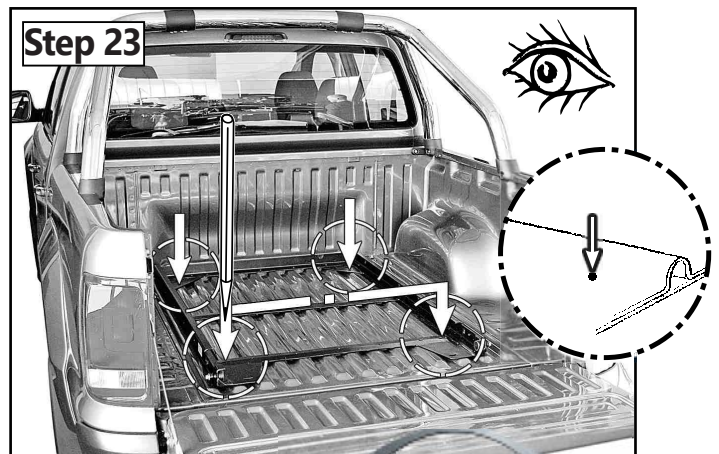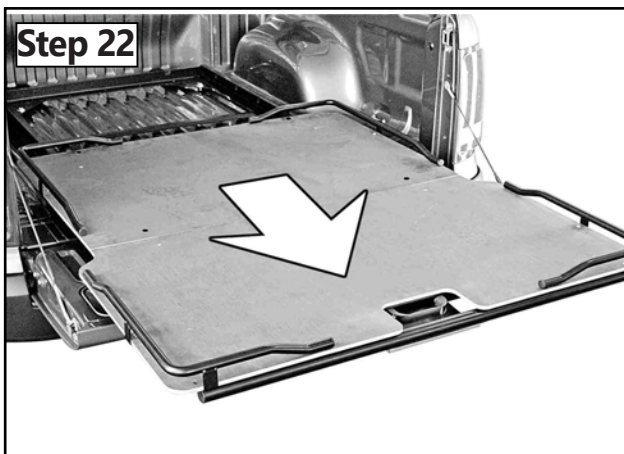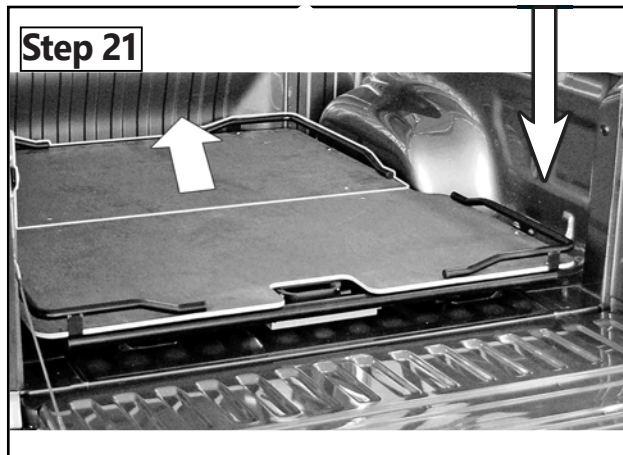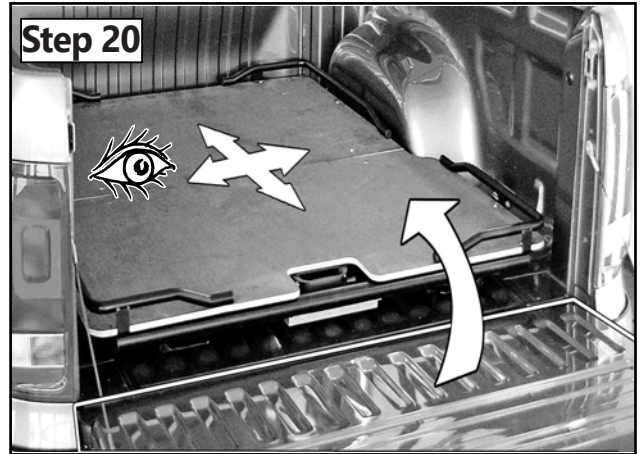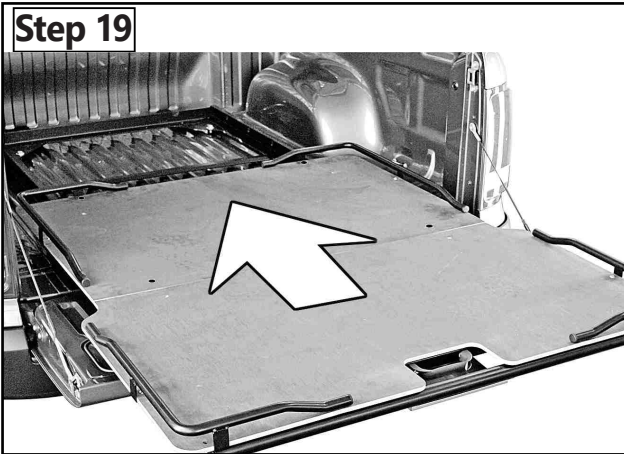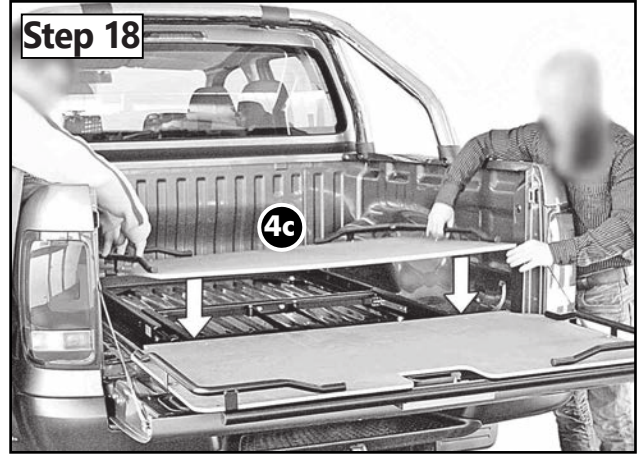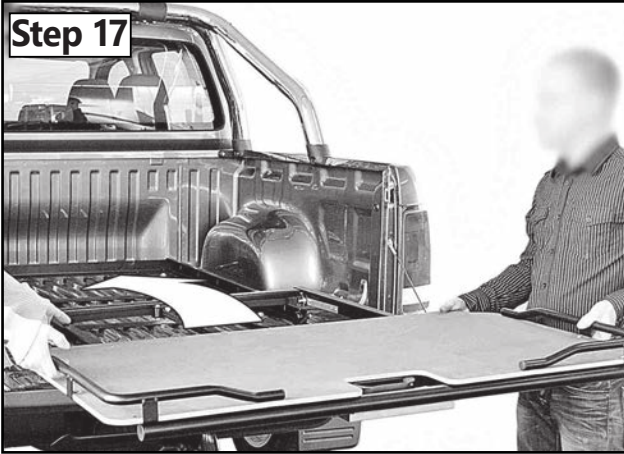

article-no:
006085 black Steel






Revision 9: 06.02.2019



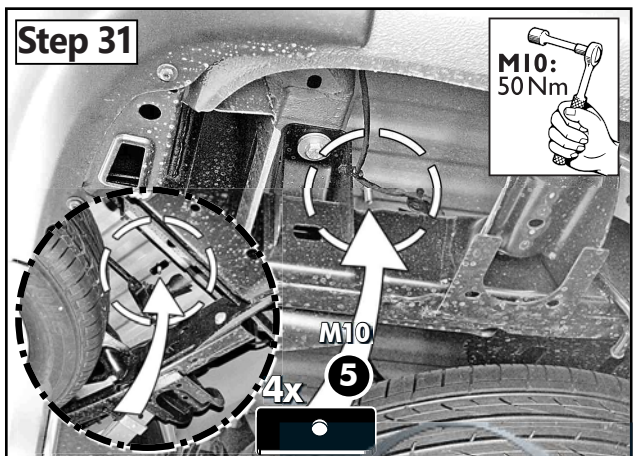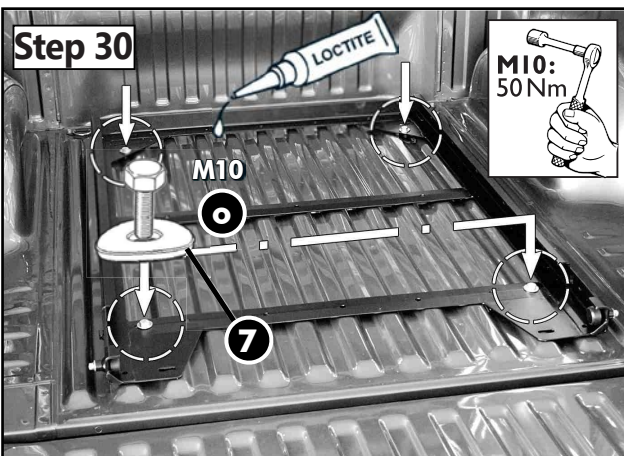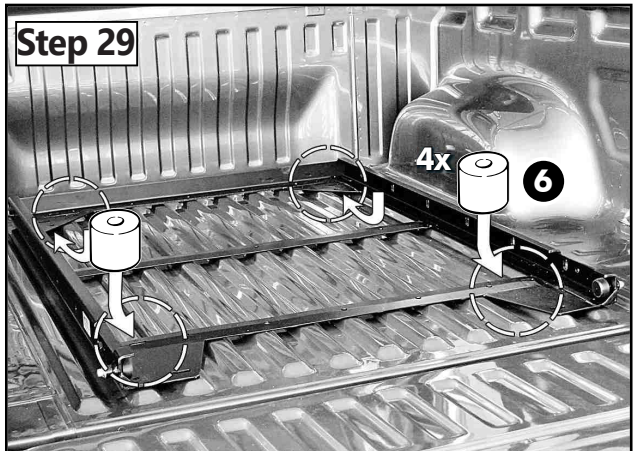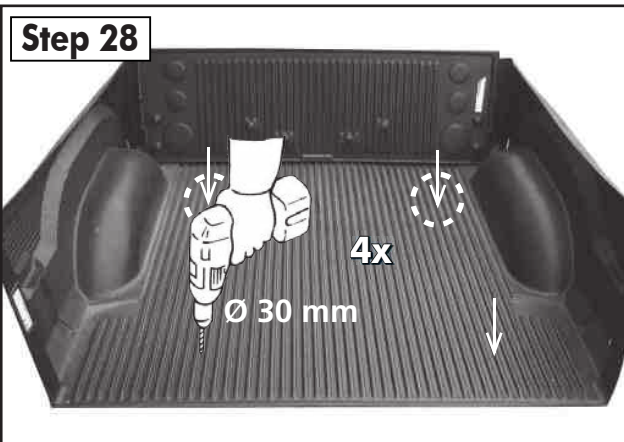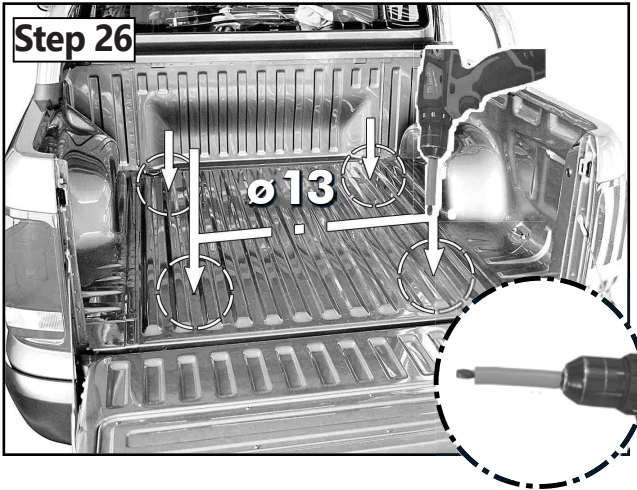

article-no:
006085 black Steel **Revision 9: 06.02.2019**



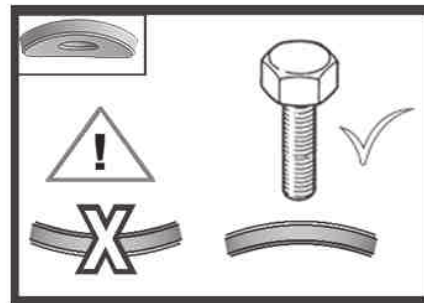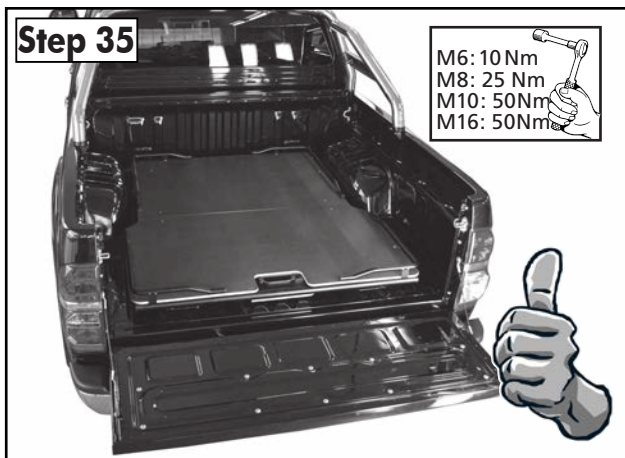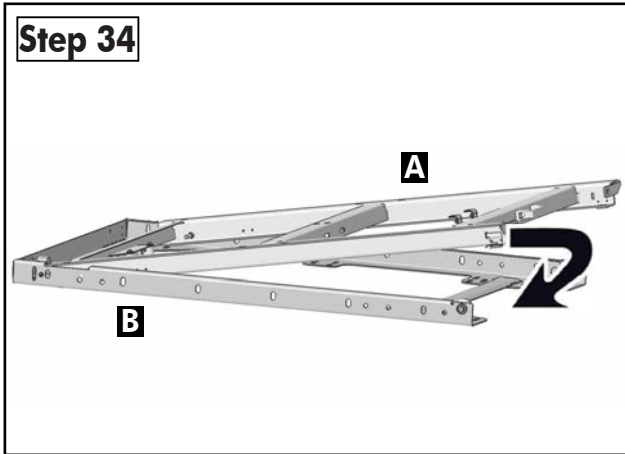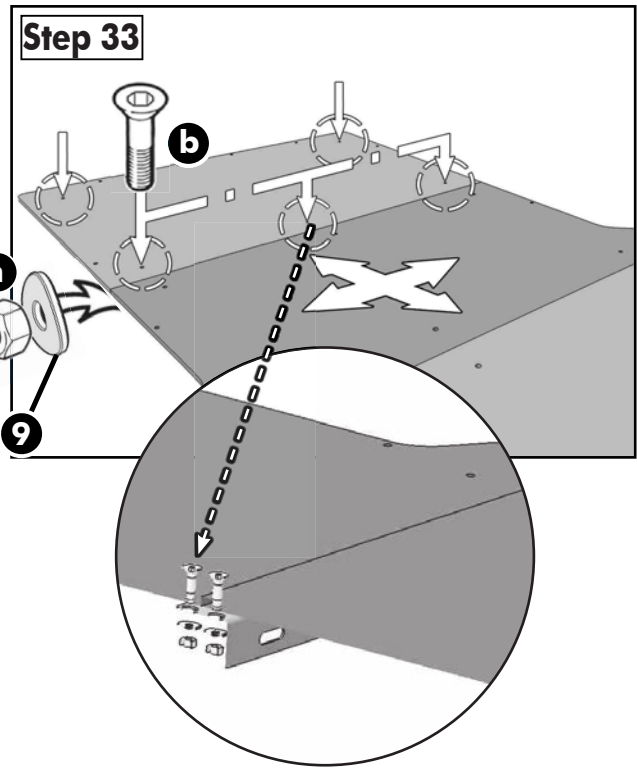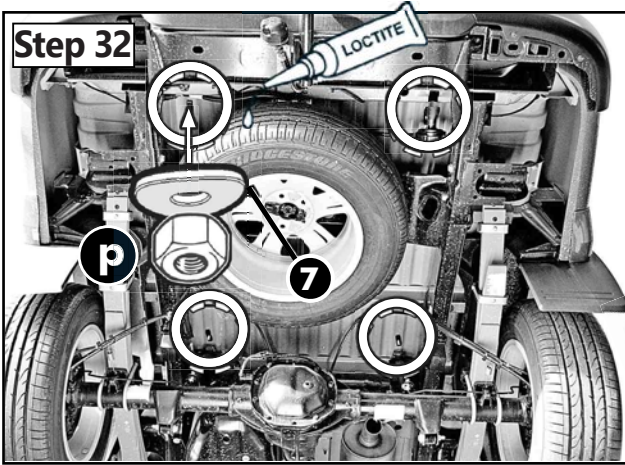

**350 kg
max**



article-no:
006085 black Steel

Revision 9: 06.02.2019

