


Nissan Pathfinder/ Navara; Modell 2010

EU-Pedestrian Protection Bully 76 with horizontal pipe 42 /
EU-Personenschutzbügel 76 mit Querrohr 42



FITTING INSTRUCTIONS

Montageanleitung • Instructions de montage
Instrucciones de montaje • Manual

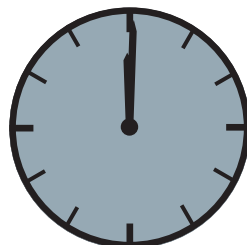

60 Minuten

Artikel-Nr:

127 4613 Stainless Steel
127 5613 Steel black
127 9613 Mounting Set


Revision 2: 25.02.2015



Nissan Pathfinder/ Navara; Modell 2010

EU-Pedestrian Protection Bully 76 with horizontal pipe 42 /
EU-Personenschutzbügel 76 mit Querrohr 42

Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias

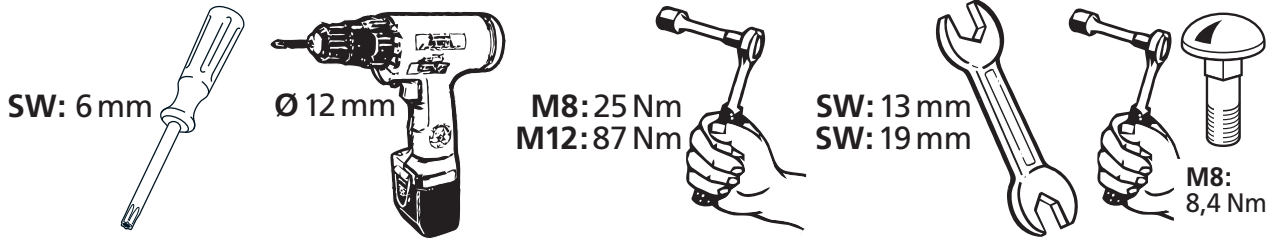

Parts list / Teileliste / Lista de accesorios

1 ø76; 127 4613.1 / 127 5613.1



Standard Parts list / Normteileliste

| | | | |
|---|--|----------------------|----|
| a | | M8x20; DIN 933 | 4x |
| b | | M12x1,25x30; DIN 961 | 2x |
| c | | M8x20; DIN 603 | 4x |
| d | | M8x20; DIN 912 | 2x |
| e | | M8; DIN 934 | 4x |
| f | | ø8; DIN 127 | 8x |
| g | | ø12; DIN 127 | 2x |
| h | | ø8,4; DIN 9021 | 8x |
| i | | ø13; DIN 9021 | 2x |
| k | | SW 13 | 8x |

Mounting set 127 9613 / Montagesatz 127 9613

2 127 5328R / 127 5329L



3 127 5330R / 127 5331L



4 127 5323

2x



5 M8; 105 5032

2x



Artikel-Nr:

127 4613 Stainless Steel
127 5613 Steel black
127 9613 Mounting Set

Revision 2: 25.02.2015

