

12Z

VW Tiguan

Modell 2011 „Track & Field“ & „Track & Style“ *

EU-pedestrian protection bar 70 with cross pipe 51

EU-Personenschutzbügel 70 mit Querrohr 51



ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage
Intructionnes de montage • Manual



45 Minuten

Artikel-Nr:

12Z4313 Stainless Steel

12Z5313 black Steel

12Z9313 Assembly-kit

Revision 1: 26.2.2008


www.antec-online.de


12Z

VW Tiguan

Modell2011 „Track & Field“ & „Track & Style“ *

EU-pedstrian protection bar 70 with cross pipe 51
EU-Personenschutzbügel 70 mit Querrohr 51

Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias

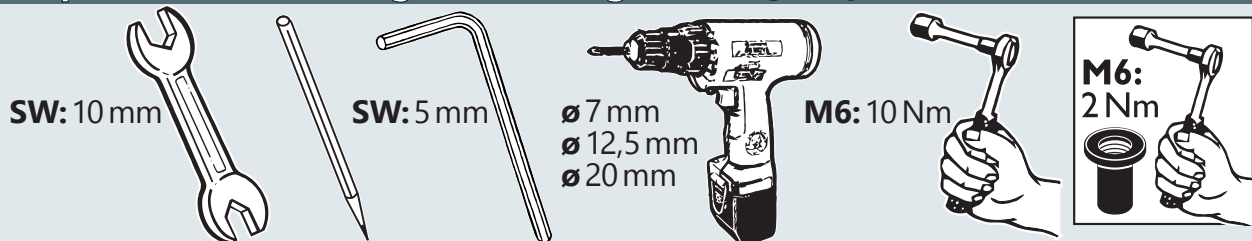

Parts list/Teileliste/Lista de accesorios

1 ø70; 12Z 4313.1/ 12Z 5313.1



Assembly-kit / Montagesatz 12Z9313


2 12Z 5023 **2x** **3** ø9; 194 5043 **2x**



4 ø12; 00 5817 **2x** **5** M6; 12Z 5069 **2x**



6 006009.1 **4x**

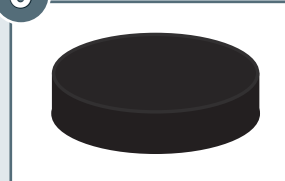

Standard Parts list / Normteileliste

a		M6x30; DIN 933	4x
b		M6x40; DIN 912	2x
c		ø6; DIN 127	6x
d		ø6,4; DIN 9021	4x
e		ø6,4; DIN 125	2x
f		M6; Geko-Well	2x
g		SW 10	2x

Artikel-Nr:

12Z 4313 Stainless Steel


12Z 5313 black Steel

12Z 9313 Assembly-kit


Revision 1: 26.2.2008




Step 1a

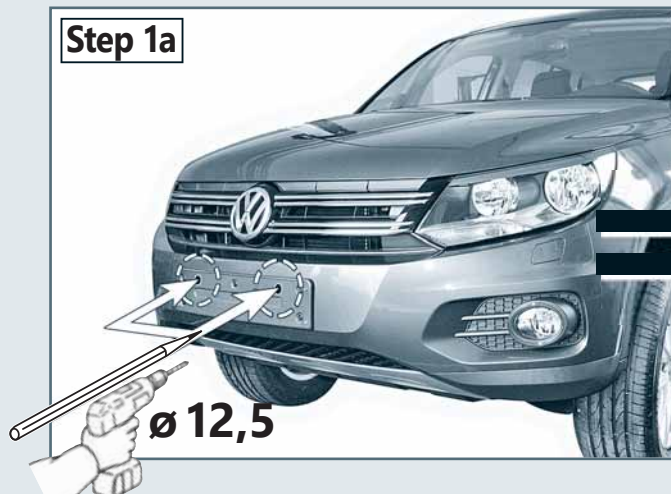


Step 1b

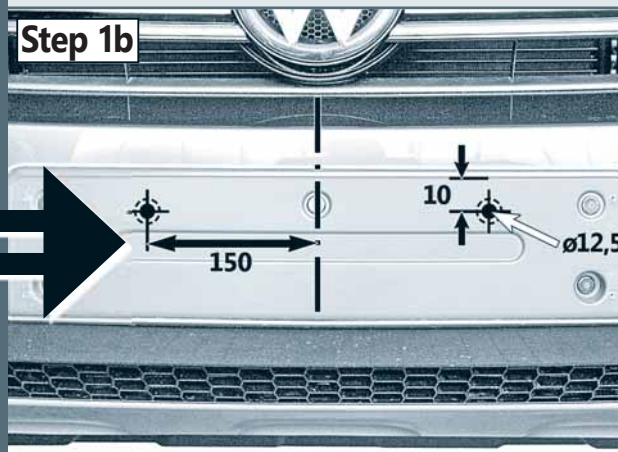

Step 2a

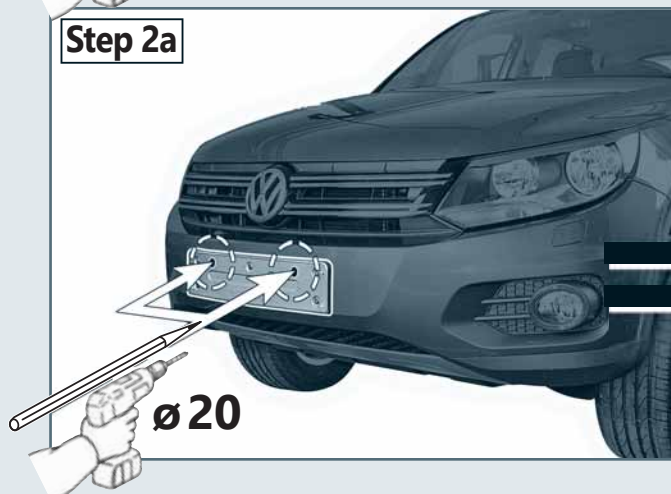


Step 2b

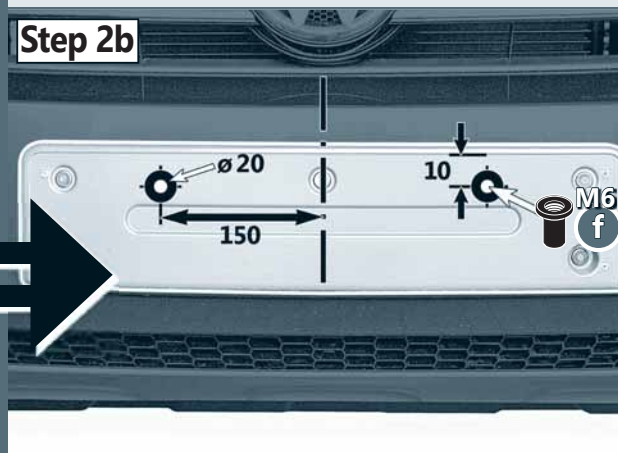

Step 3




Step 4a

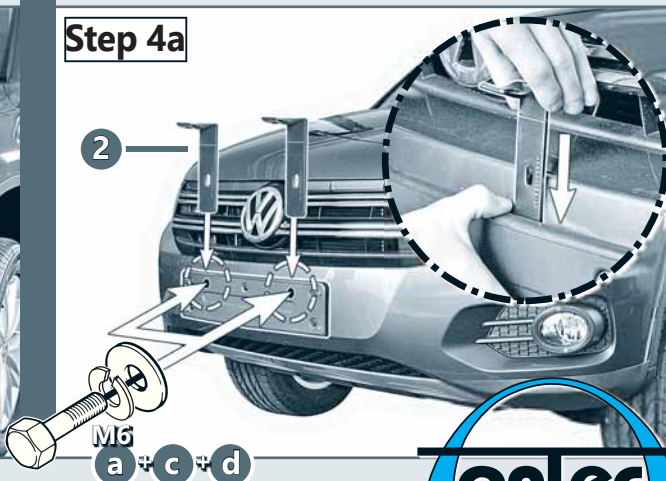


Artikel-Nr:
12Z4313 stainless steel

Revision 1: 26.2.2008

Step 5

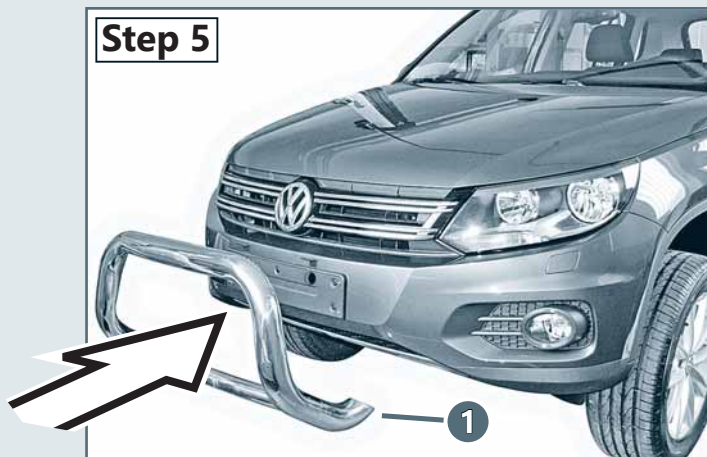

Step 6

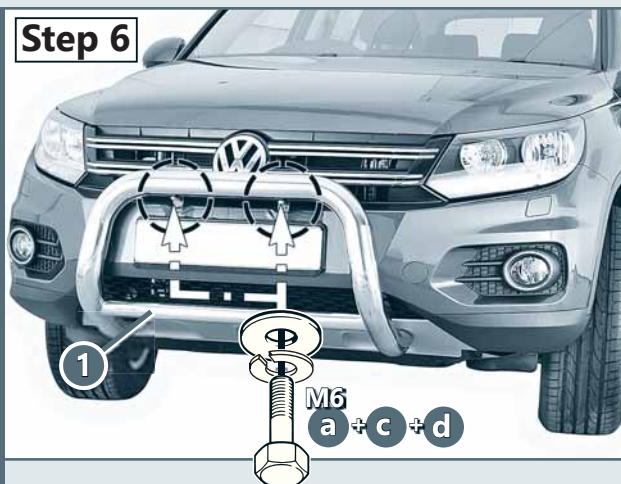

Step 7




Step 8




Step 9




Step 10




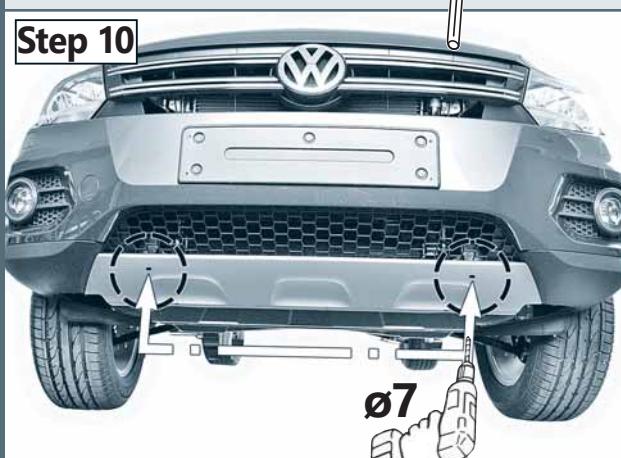


Step 11

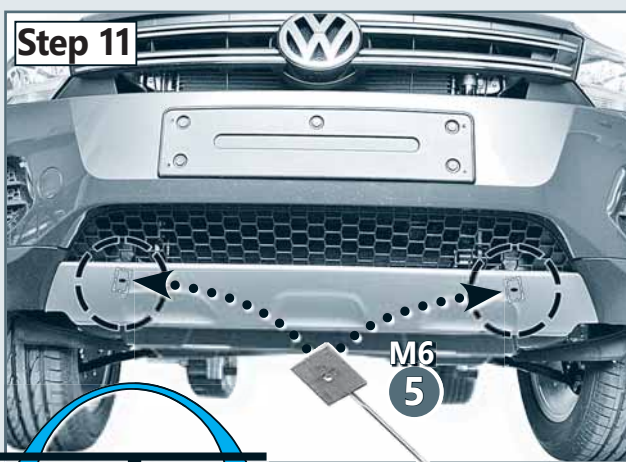

Step 12

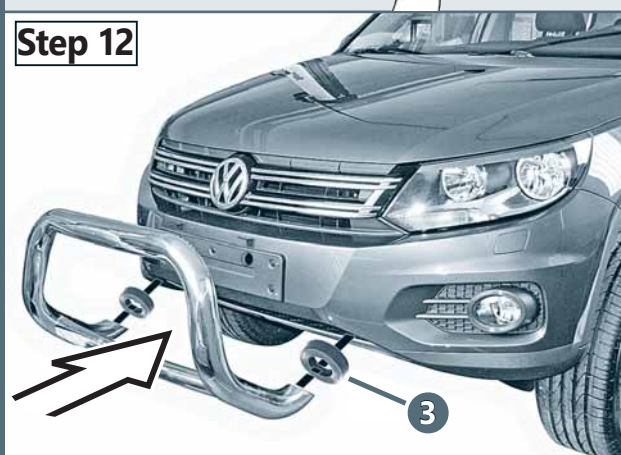

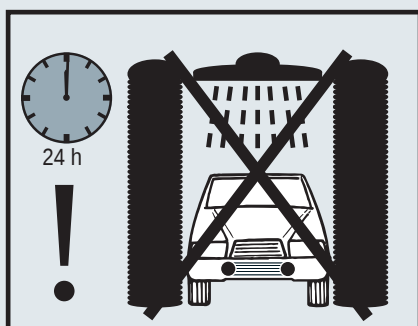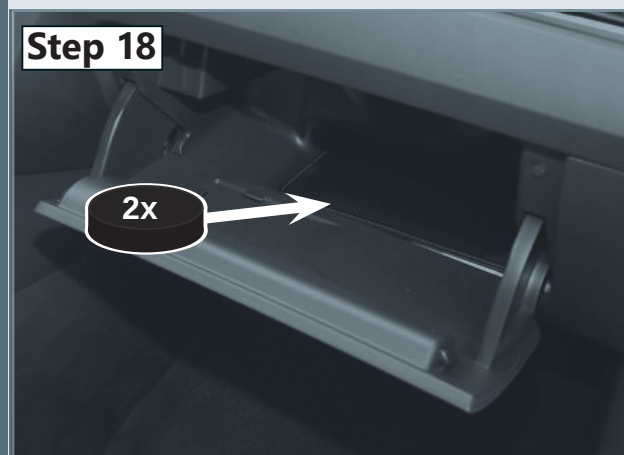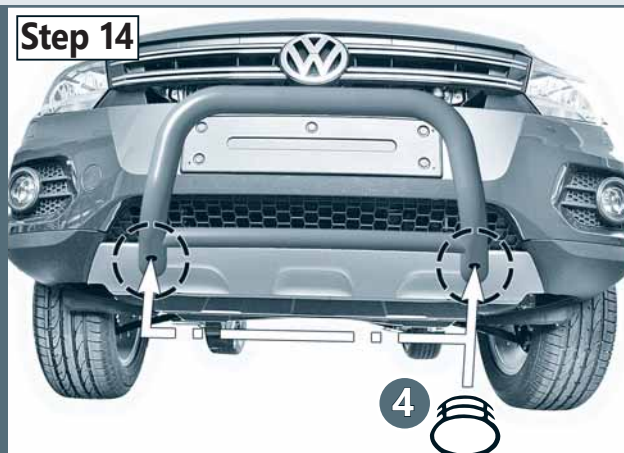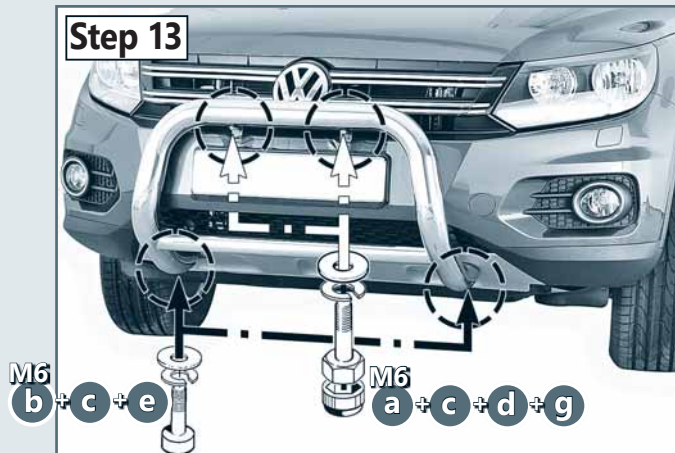

Die Funktion des PDC ist eingeschränkt
 The function of the PDC will be restricted
 La fonction de la pdc est limitée
 La función de la PDC se restringirá
 Funktio PDC on rajoitettu
 Funkce PDC bude omezeno
 Funksjonen til PDC vil være begrenset
 Funktionen för PDC kommer att begränsas