


VW Transporter T5 / Multivan

Lamp Carrier 60 / Lampenträger 60



FITTING INSTRUCTIONS

Montageanleitung • Instructions de montage
Instrucctionnes de montage • Manual

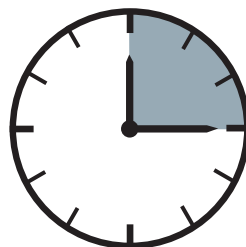

15 Minuten

Artikel-Nr:

151 4003 Stainless Steel
151 5003 Steel black
151 9003 Mounting Set


Revision 2: 24.01.2013



VW Transporter T5 / Multivan

Lamp Carrier 60 / Lampenträger 60

Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias

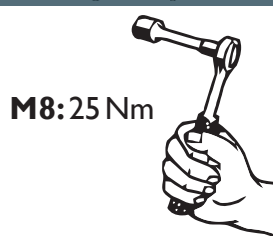

Parts list / Teileliste / Lista de accesorios

1 Ø 60; I51 4003.I (I51 5003.I)



**Mounting set I51 9003 /
Montagesatz I51 9003**

2 I515026R / I515027L



Standard Parts list / Normteileliste

a		M8x25; DIN 912	2x
b		M8x35; DIN 933	2x
c		Ø8; DIN 127	4x
d		Ø 8,4; DIN 125	2x
e		Ø 8,4; DIN 9021	2x
f		Inden Nr. SRL 21 black	2x
g		Inden Nr. SRL 28 black	2x
h		Ø 5x35; W-0138 Zn	2x
i		Ø 5,3; 9021 Zn	2x

Artikel-Nr:

I51 4003 Stainless Steel
I51 5003 Steel black
I51 9003 Mounting Set

Revision 2: 24.01.2013

