

**17W  
4319F**


## Fiat Fullback, Modell 2016

Roll bar 60  
Überrollbügel 60  
Arceau 60



# ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

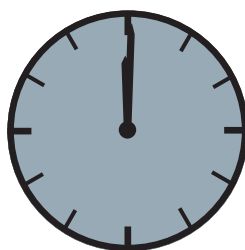

**60 Minuten**




article no.:

17W4319F (S) inox

17W5319F black steel




**Revision 5: 14.10.2020**



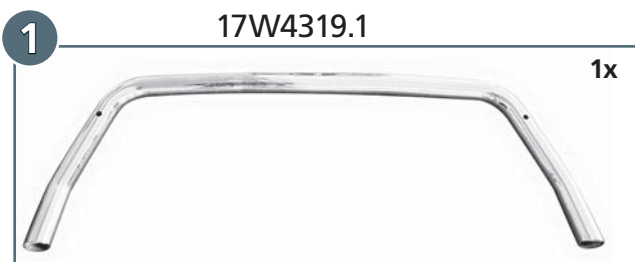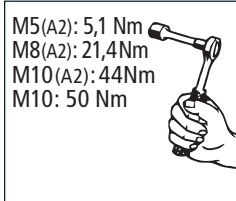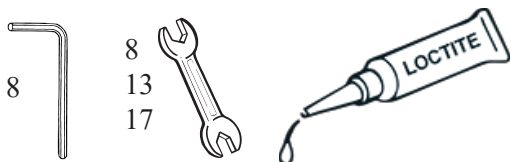


mounting kit: 17W9319


	M10x30; DIN 912 A2	2x
	M5x20(25); DIN 933 A2	8x
	M8x30; DIN 933 A2	4x
	M10x40; DIN 933 Zn	4x
	M5; DIN 985 A2	8x
	Ø8; DIN 127 A2	4x
	ø5,3; DIN 125 A2	16x
	ø8,4; DIN 125 A2	4x
	ø10,5; DIN 125 Zn	4x
	SW8	16x
	SW17	4x
	Gummi Stopfen Art.Nr.0561 116	2x

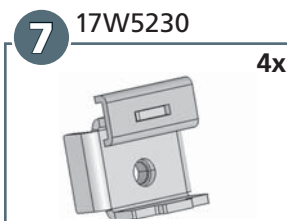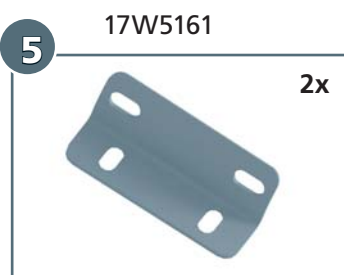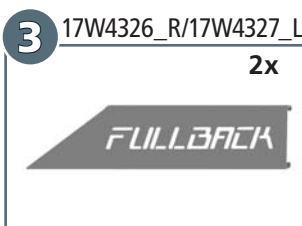

**Step 1**

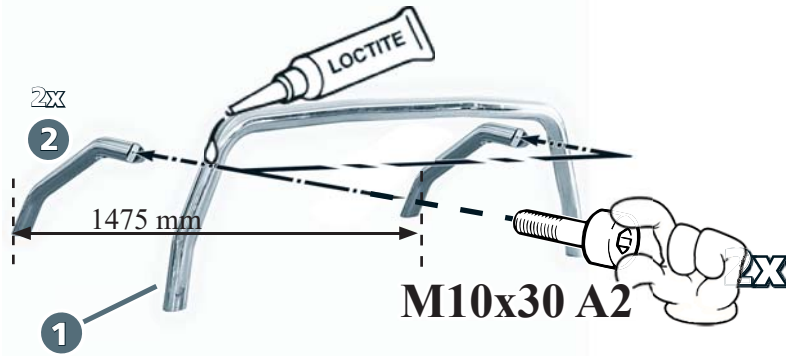


**Step 2**

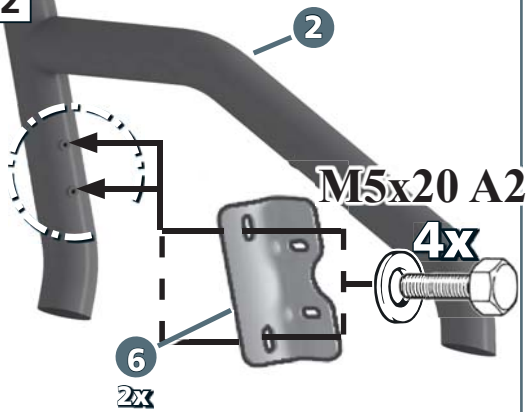


**Step 3**



**Step 4**

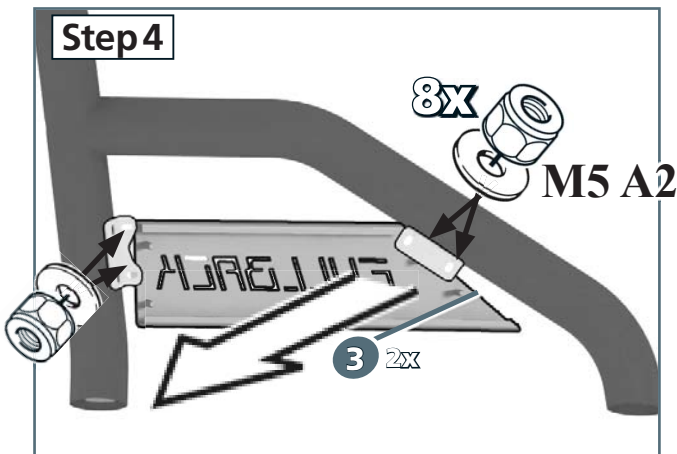

**Step 5**

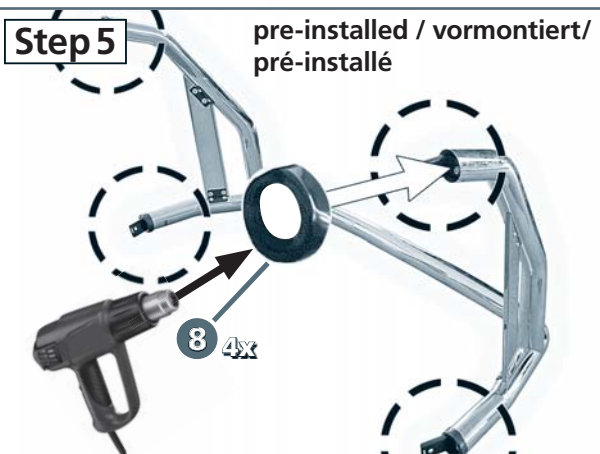

**Step 6**

