


Schublade 1700 / Montagesatz mit 11E9290
Drawer 1700 / Assembly-kit with 11E9290
Tiroir 1700 / Assemble-kit avec 11E9290



ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

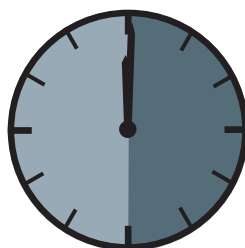

90 Minuten

article-no:
006085 black Steel

Revision 10: 07.10.2019




Schublade 1700 / Montagesatz mit 11E9290


Drawer 1700 / Assembly-kit with 11E9290

Tiroir 1700 / Assemble-kit avec 11E9290

Required tools / Benötigte Werkzeuge / Outillage requis

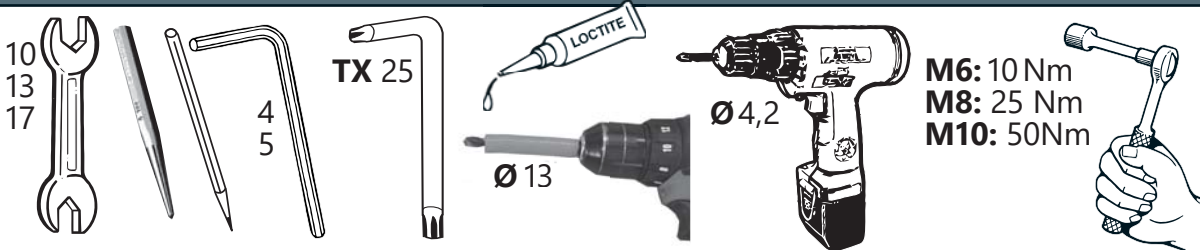

Parts list/Teileliste/Lista de accesorios

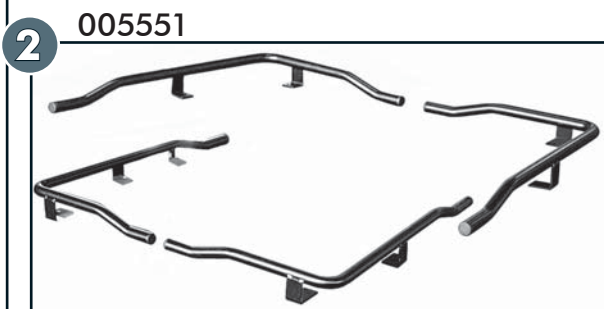



a		ø5,5x25; DIN 7976	2x
b		M6x30; DIN 7991	14x
c		M6x12; ~ISO7380	10x
d		M6x25; ~ISO7380	8x
e		M6x20; DIN 933	2x
f		M8x20; DIN 933	2x
g		M6 weld nut/Anschweißmutter/ soudure écrou	10x
i		ø6,4; DIN 9021	6x
m		M6; DIN 985 Zn	2x
n		M6; DIN 934 Zn	14x

8 ø9; 005497 **2x** **9** ø6,6; 005495 **14x**



Assembly-kit / Montagesatz / Assemble-kit

11E9290

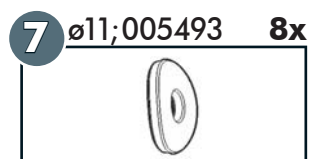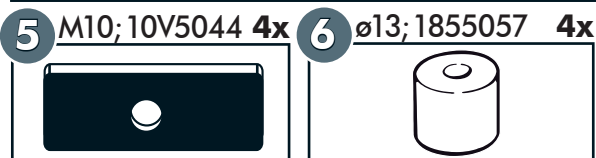


o		M10x60; DIN 933	4x
p		M10; DIN 934	4x

article-no:
006085 black Steel

Revision 10: 07.10.2019



Schublade 1700 / Montagesatz mit 11E9290
Drawer 1700 / Assembly-kit with 11E9290
Tiroir 1700 / Assemble-kit avec 11E9290

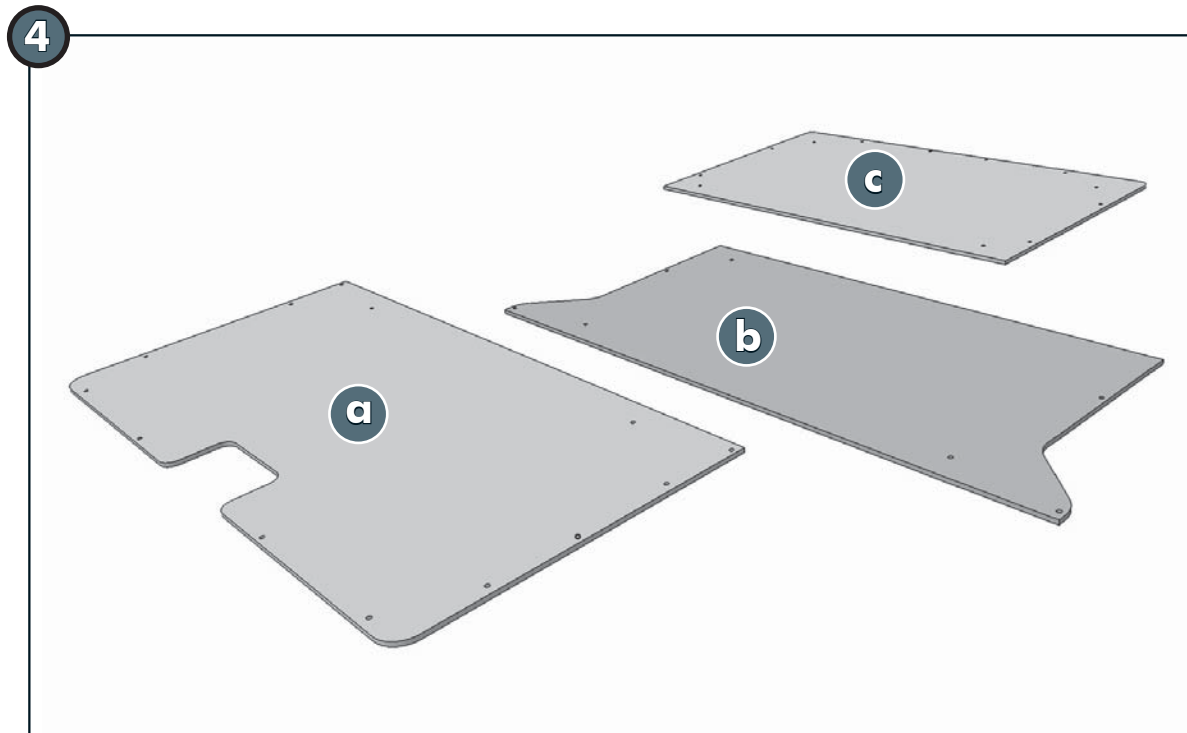









Artikel-Nr. Item-Nr. numéro d'article	KFZ Hersteller auto- motive manufacturer constructeur automo- bile	Bezeichnung designation désignation	Modell model modèle	Holzauflagen timber vehicle part exigences bois
1665690N	Nissan	Navara D40 King Cab NP300 Navara D23 King Cab without bedliner*	ab 2005 ab 2016	005566N
13R5690N	Nissan	NP 300 King Cab	04/2008	005566N
1935690N	Isuzu	D MAX Space Cab	2007	005566N
10V5690N	Mitsubishi	L200 Club Cab	2006	005566N
11K5690N	Madza	BT50 Freestyle Cab (L Cab) RAB Cab)	2006 / 2009	005566N
11K5690N	Ford	Ranger Superkabine (Extrakabine)	2009	005566N
15V5690N 15V5590N	Ford	Ranger Extrakabine (Extra Cab) Ranger Extra Cab (XC)	2012 2016	007770N 007788N
17W5690N	Mitsubishi	L200 Club Cab,(KJ0T)	2016+2019	007783N
17W5690N	Fiat	Fullback Extended Cab	2016	007783N
11E5490N	Toyota	Hilux Xtra Cab	2016	007790N

***without bedliner**
ohne Laderaumwanne !
sans doublure de caisse ■

article-no:
006085 black Steel

Revision 10: 07.10.2019











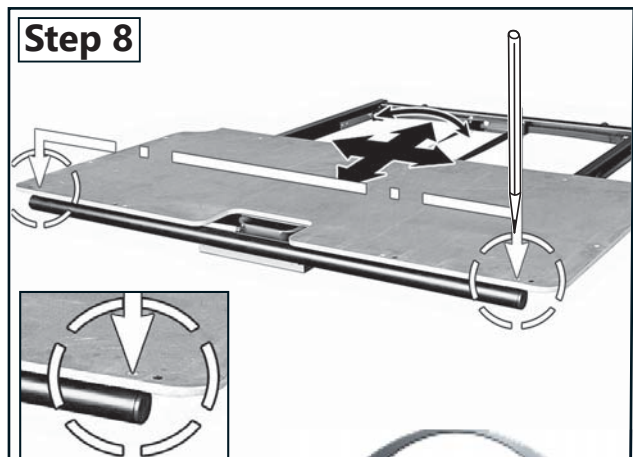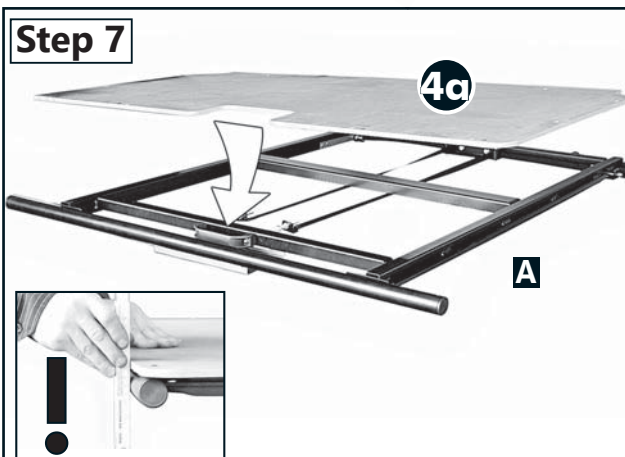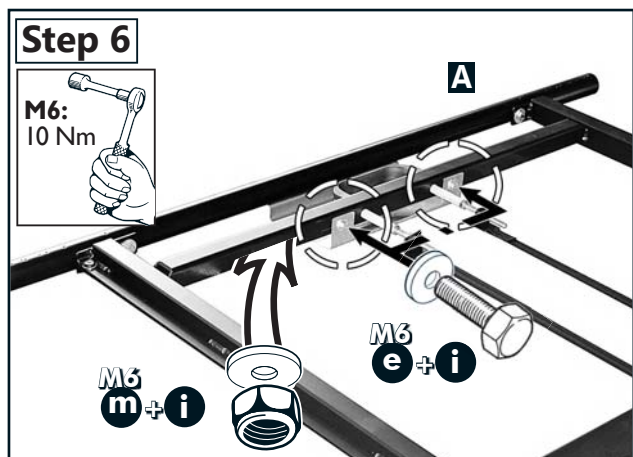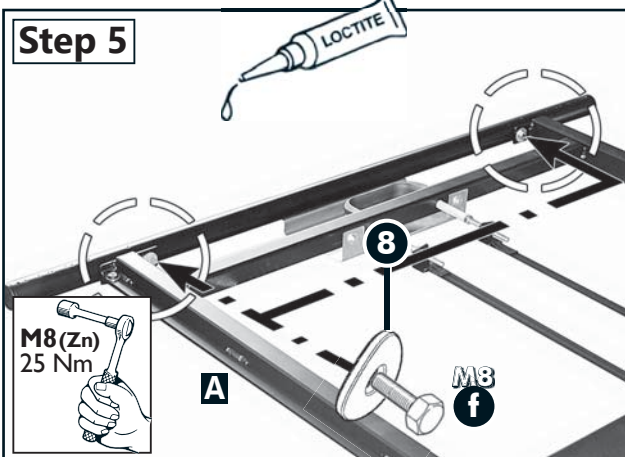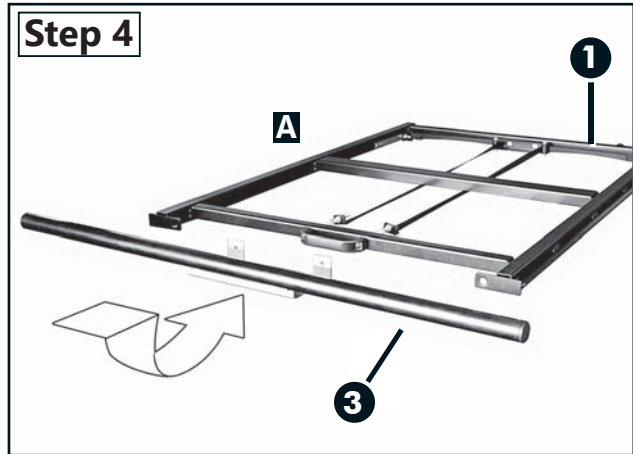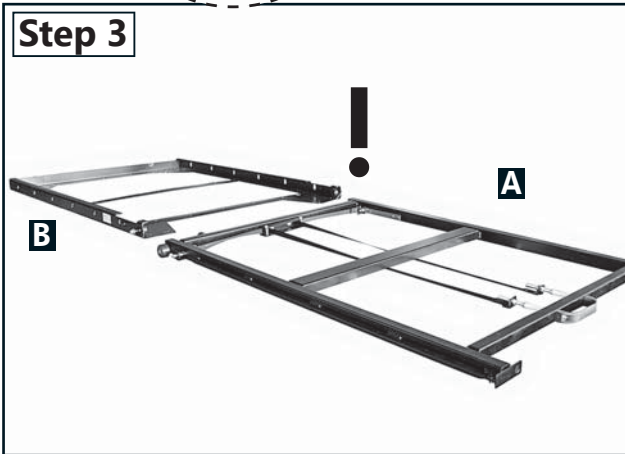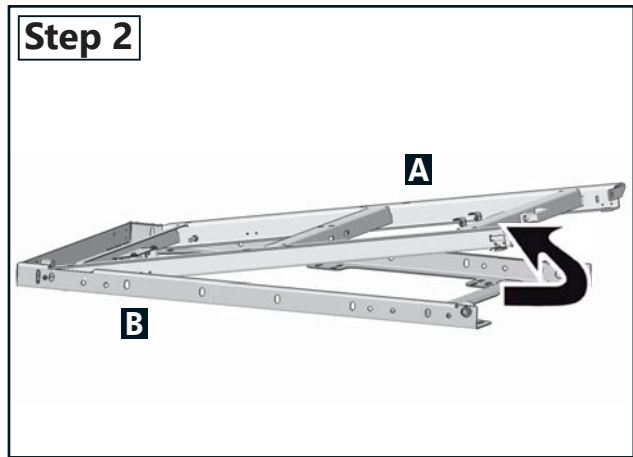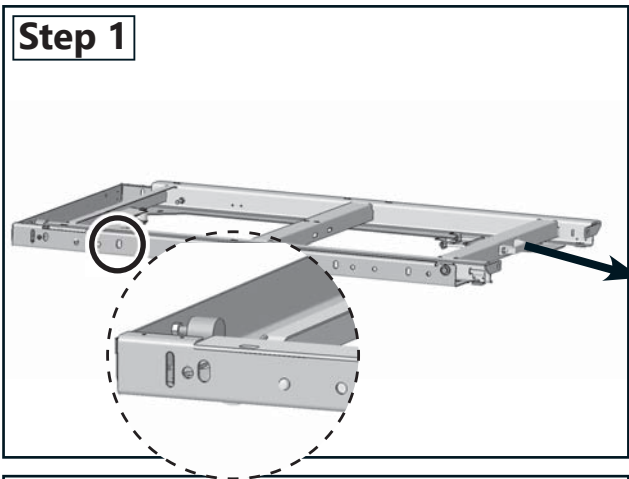

article-no:
006085 black Steel

Revision 10: 07.10.2019









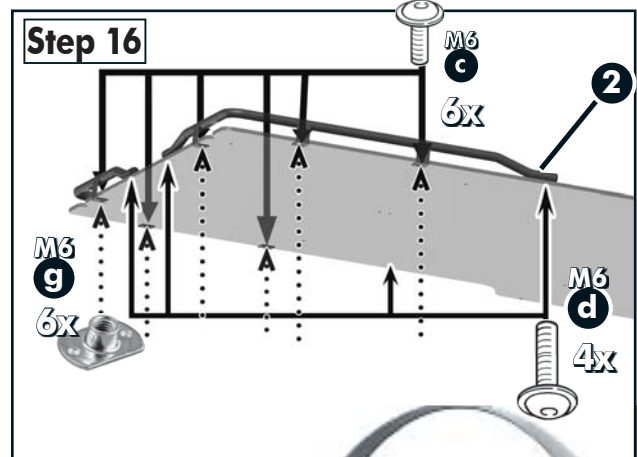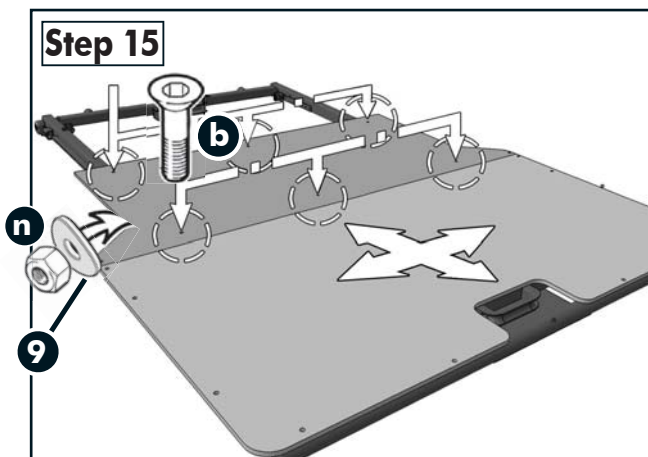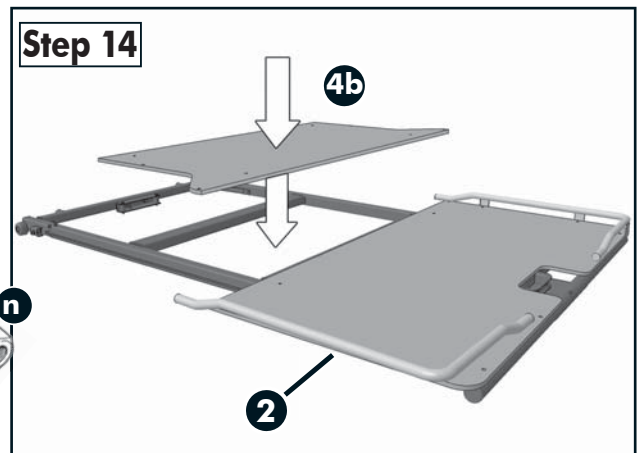
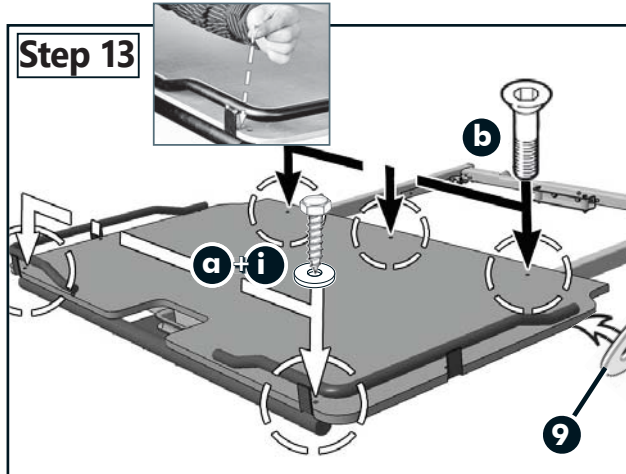
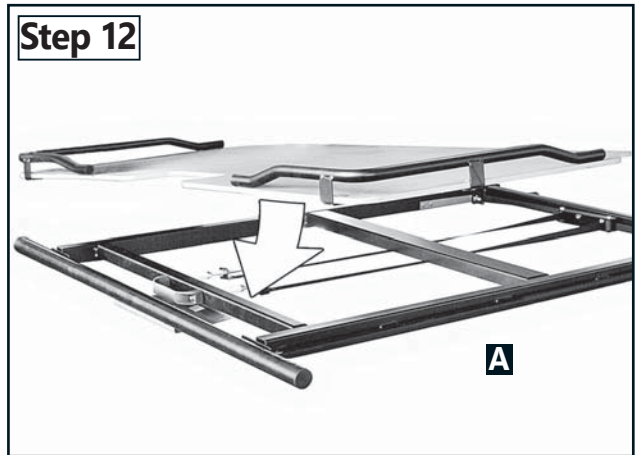
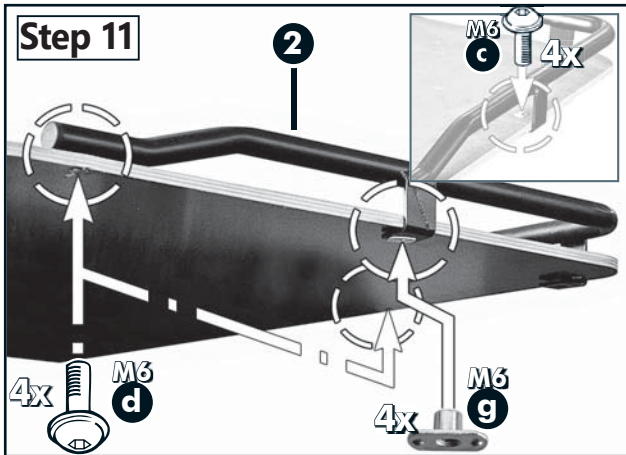
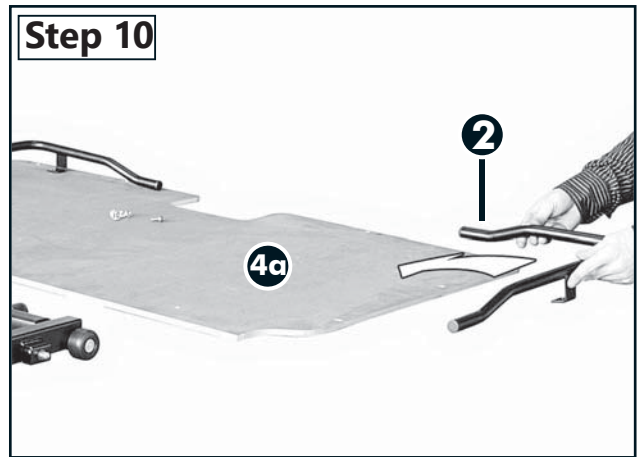
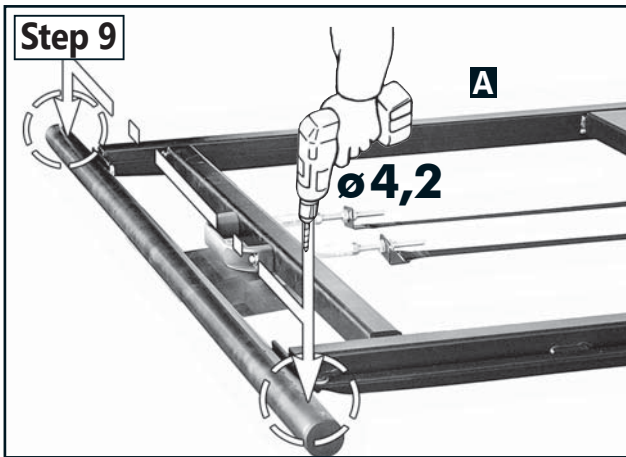


article-no:
006085 black Steel

Revision 10: 07.10.2019








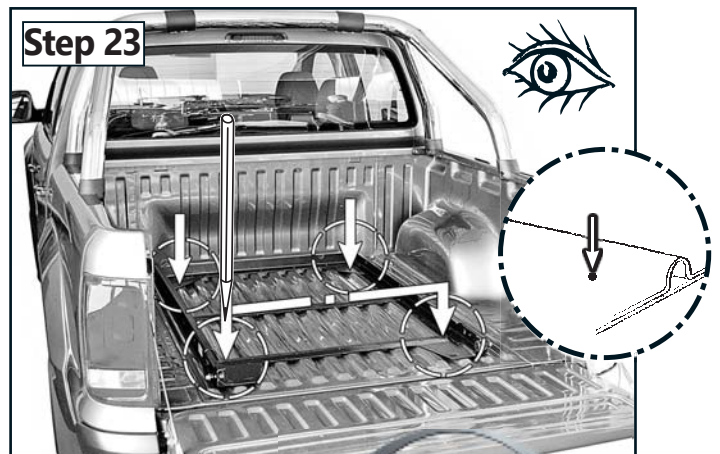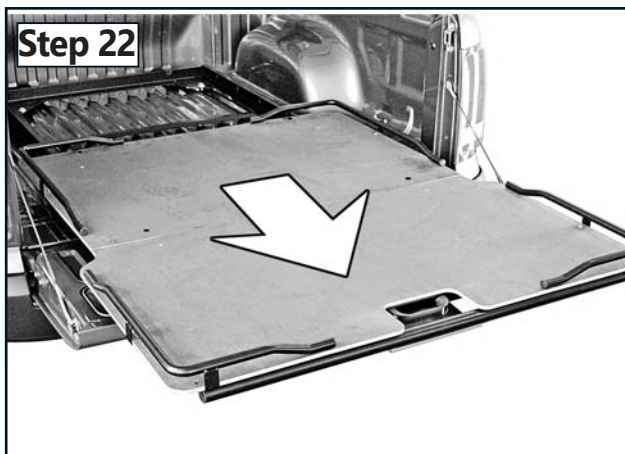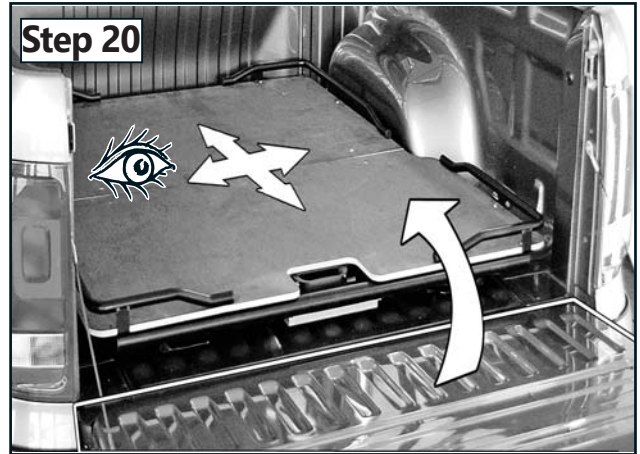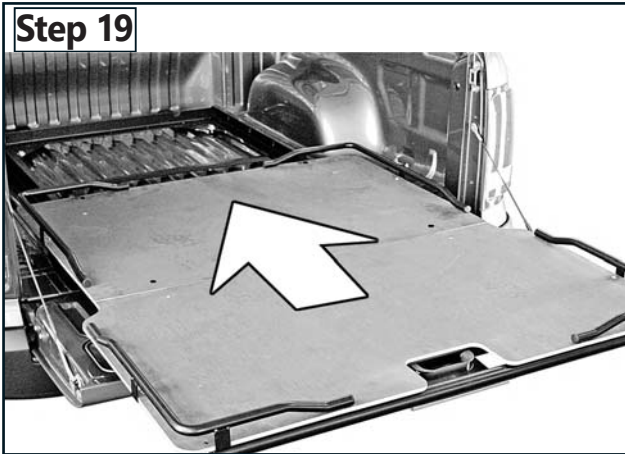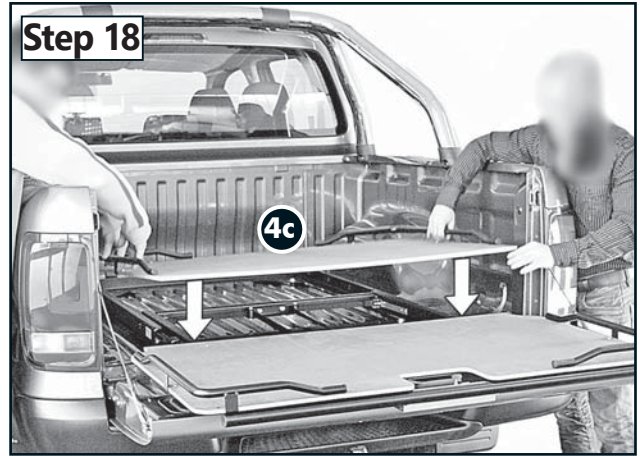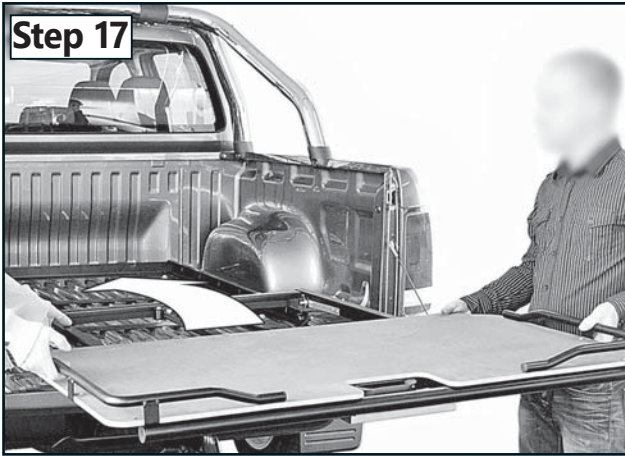

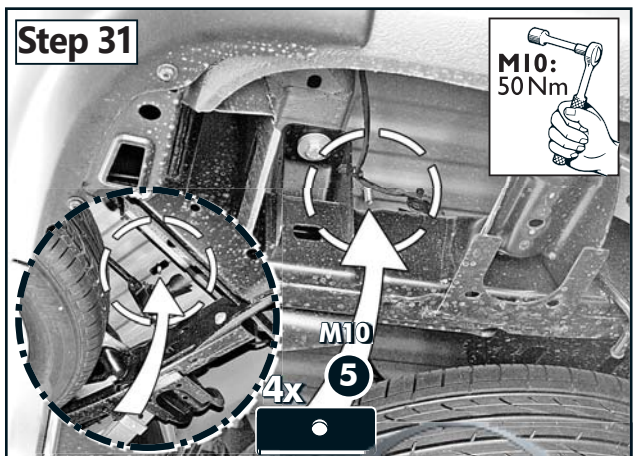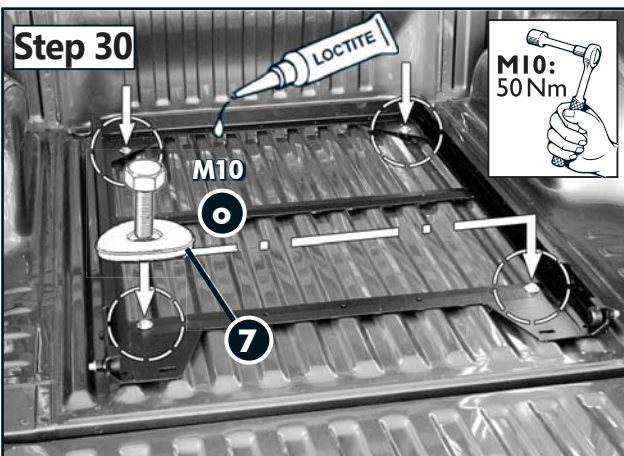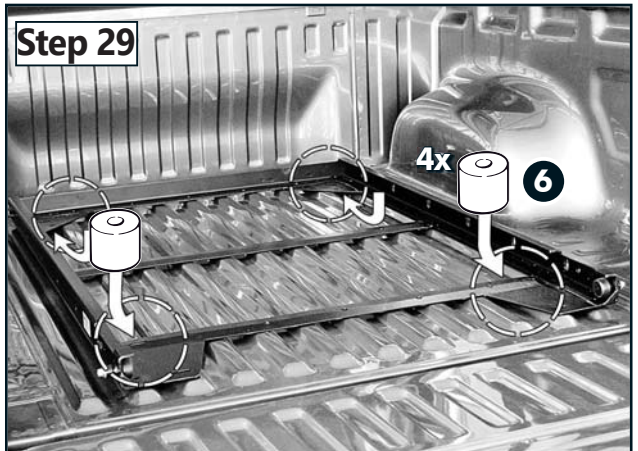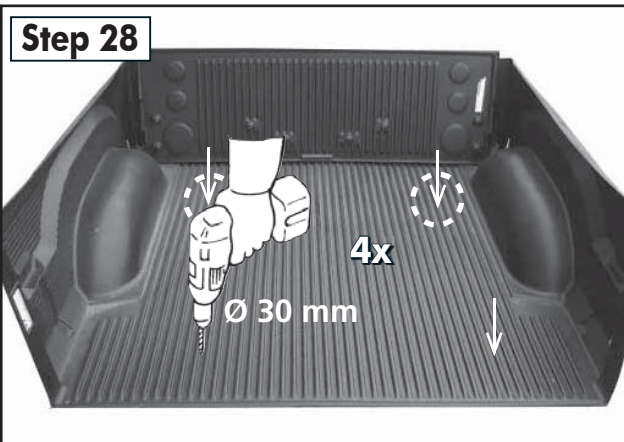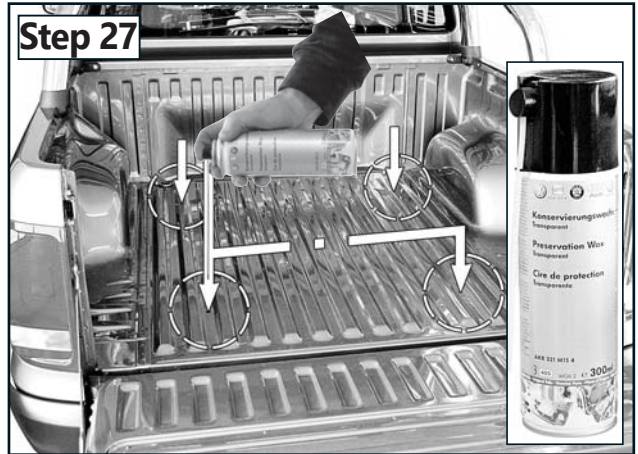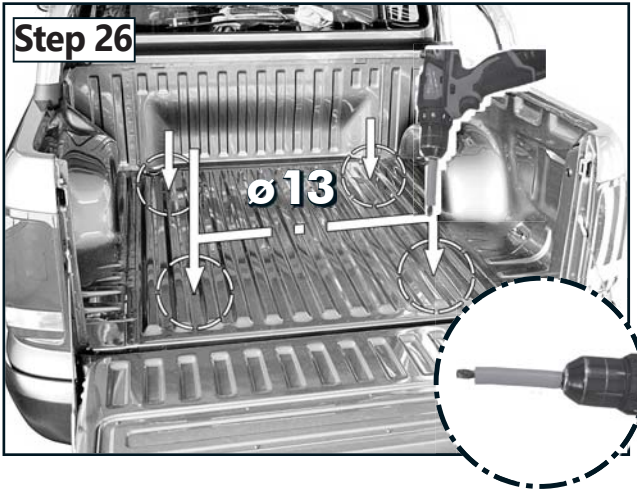

article-no:
006085 black Steel **Revision 10:** 07.10.2019



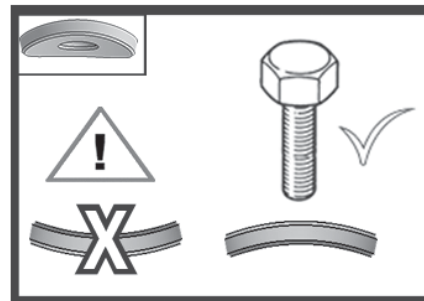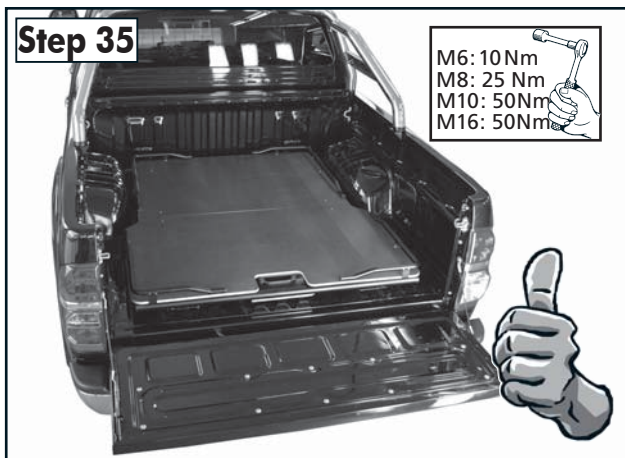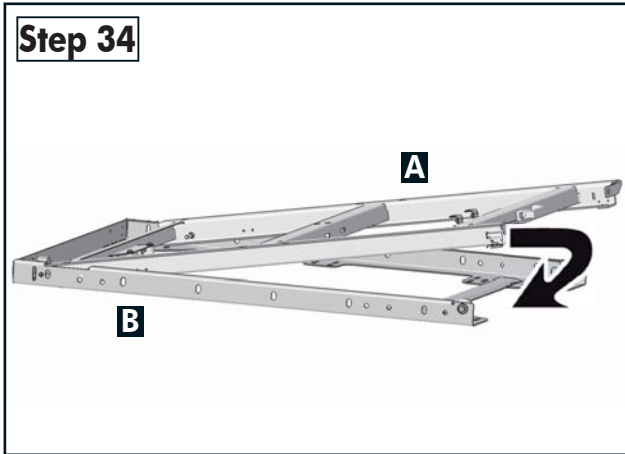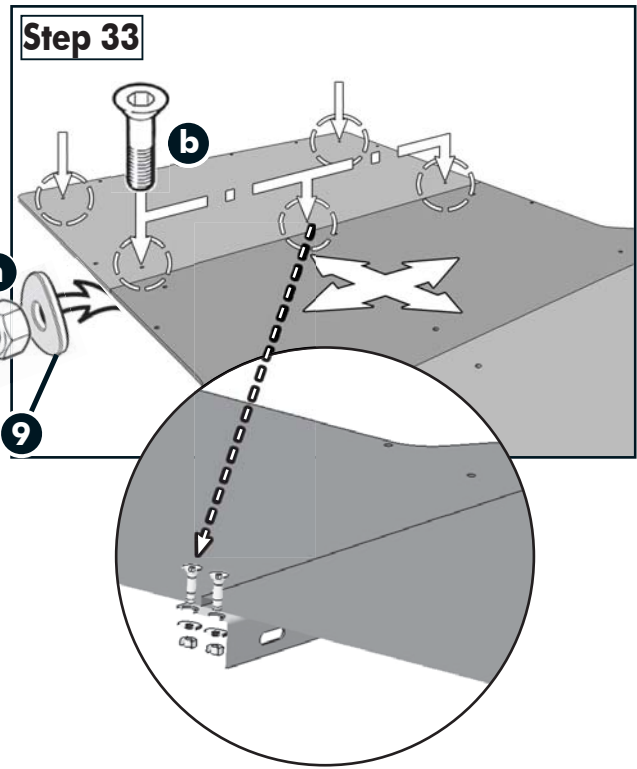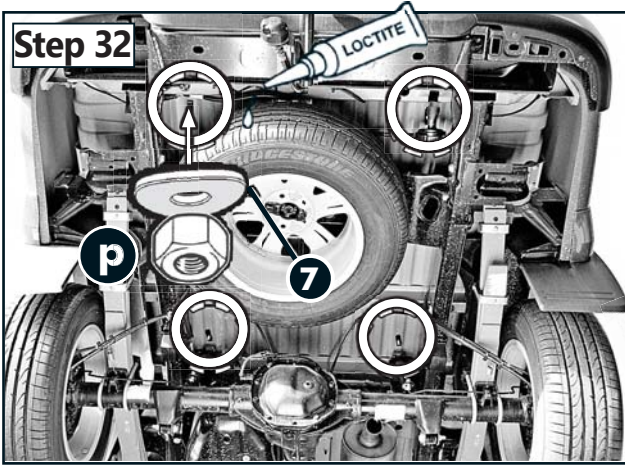

**350 kg
 max**



article-no:
 006085 black Steel **Revision 10:** 07.10.2019

