

**18A**  
**4050**

## Hyundai Tucson, Md.2015+2018

Flankenschutzrohr 60 mit Noppenauftritt


Side bar 60 with Step and Rubber Dots

Côté bar 60 avec boutons apparence



## ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

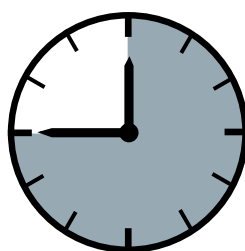

**45 Minuten**

article no.:

18A4050 (S) inox


18A5050 black steel

**Revision 4: 12.02.2019**




[www.antec-online.de](http://www.antec-online.de)


page/Seite 1

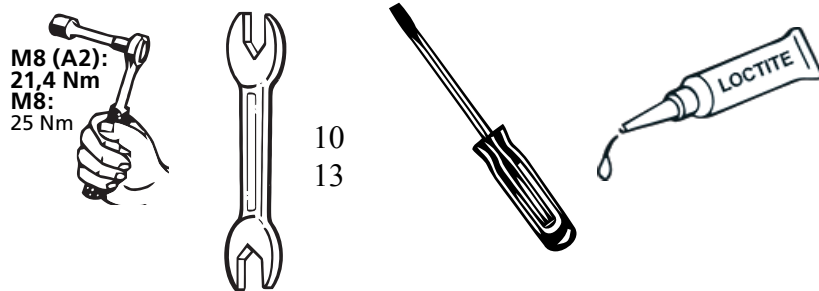

18A4050.1 / 18A5050.1  
18A4050.2 / 18A5050.2

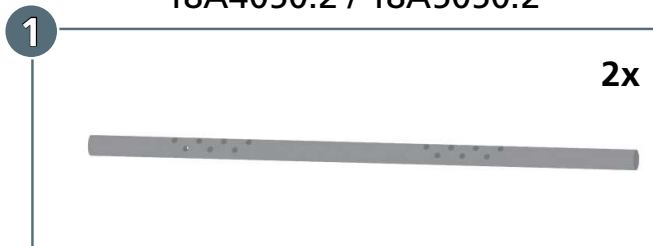

18A5230

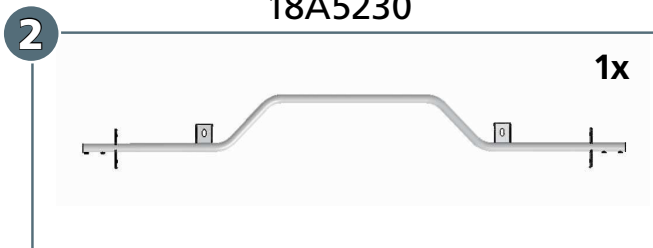


18A5232 R




18A5233 L



18A5030 R

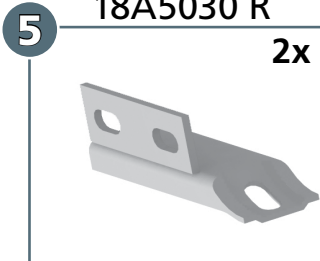


18A5031 L

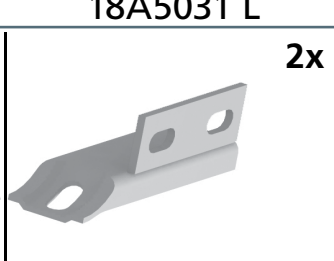


mounting kit: 18A9050

|  |                     |     |
|--|---------------------|-----|
|  | M8 x 20; DIN 933 Zn | 10x |
|  | M8 x 30; DIN 933 Zn | 6x  |
|  | M8 x 25; DIN 933 A2 | 4x  |
|  | M8; DIN 934 Zn      | 10x |
|  | Ø 8,4; DIN 9021 Zn  | 6x  |



18A5029

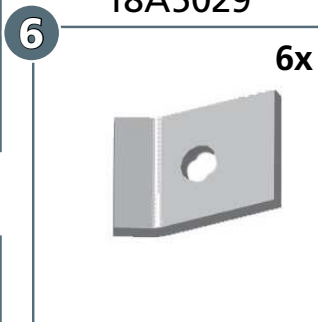

1895056

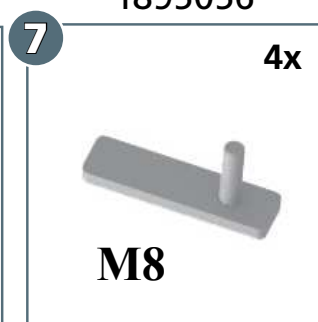

005498

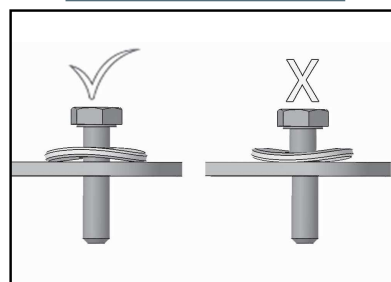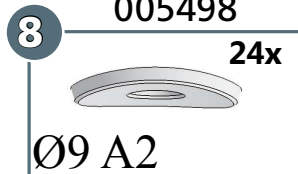

article no.:



18A4050 (S) inox

18A5050 black steel

Revision 4: 12.02.2019




Step 1


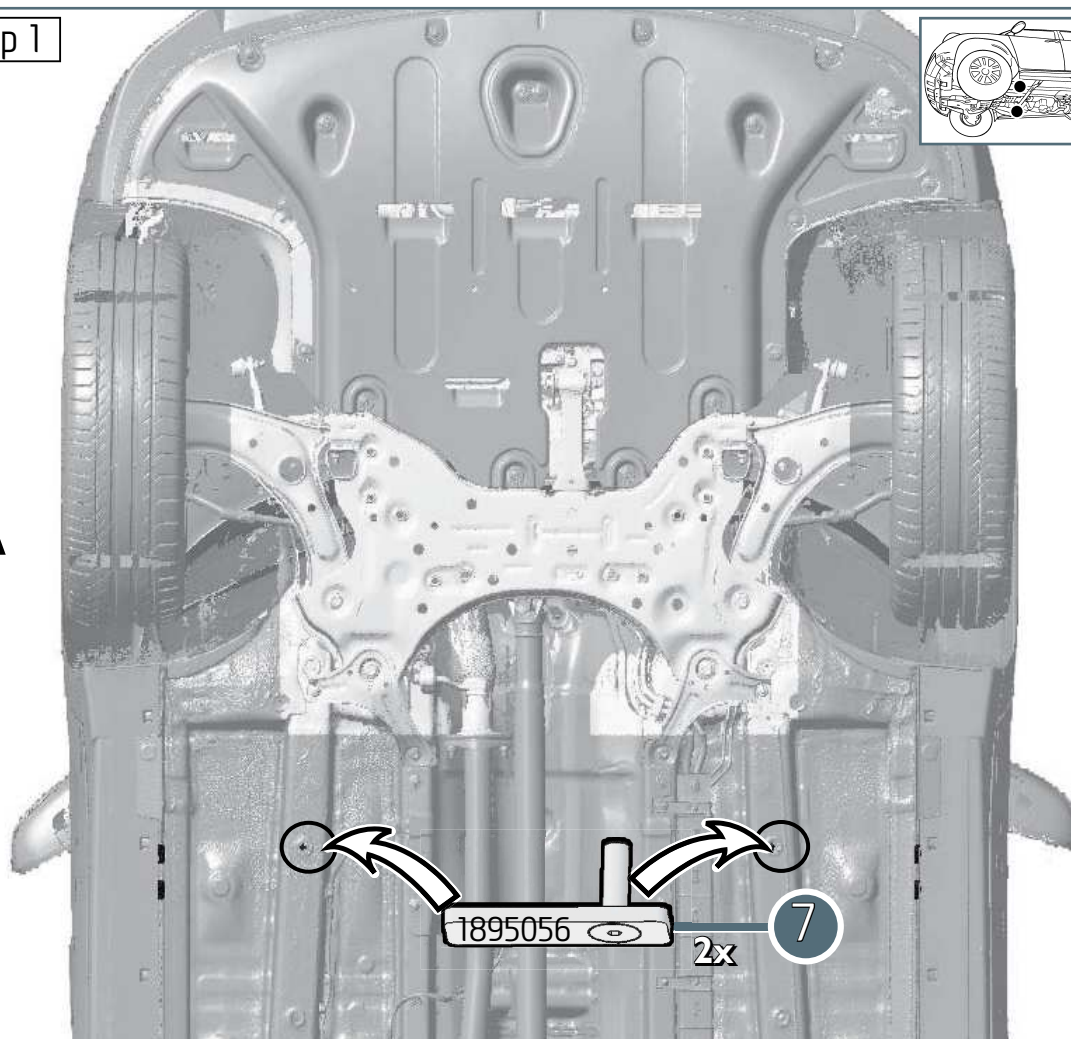
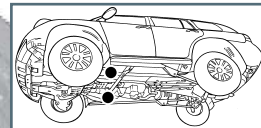





Step 2






Fahrtrichtung  
driving direction

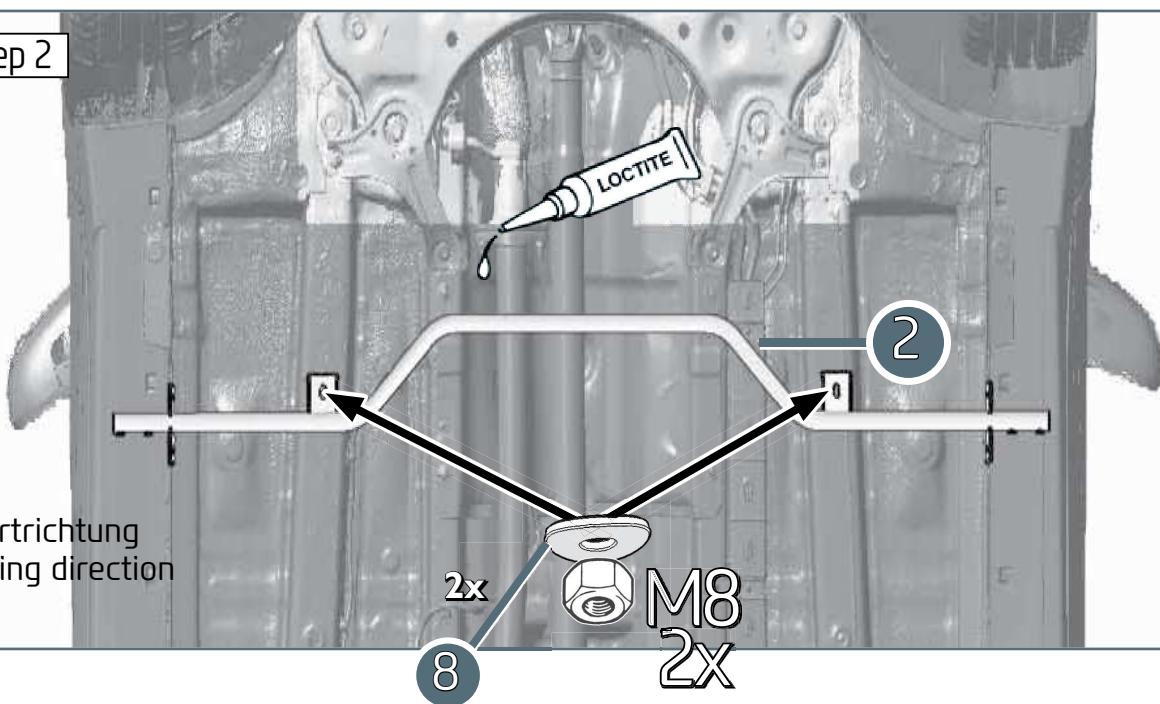

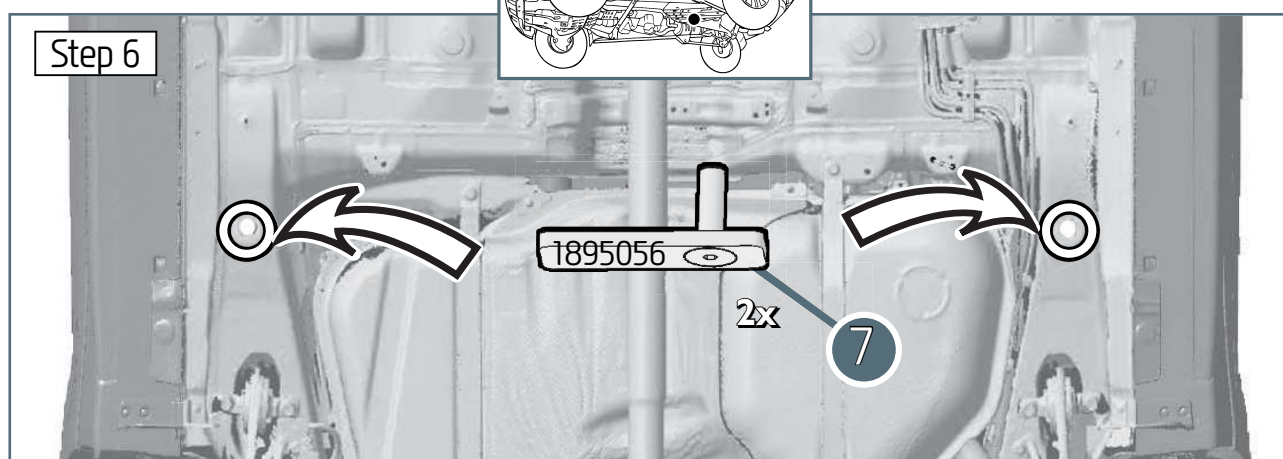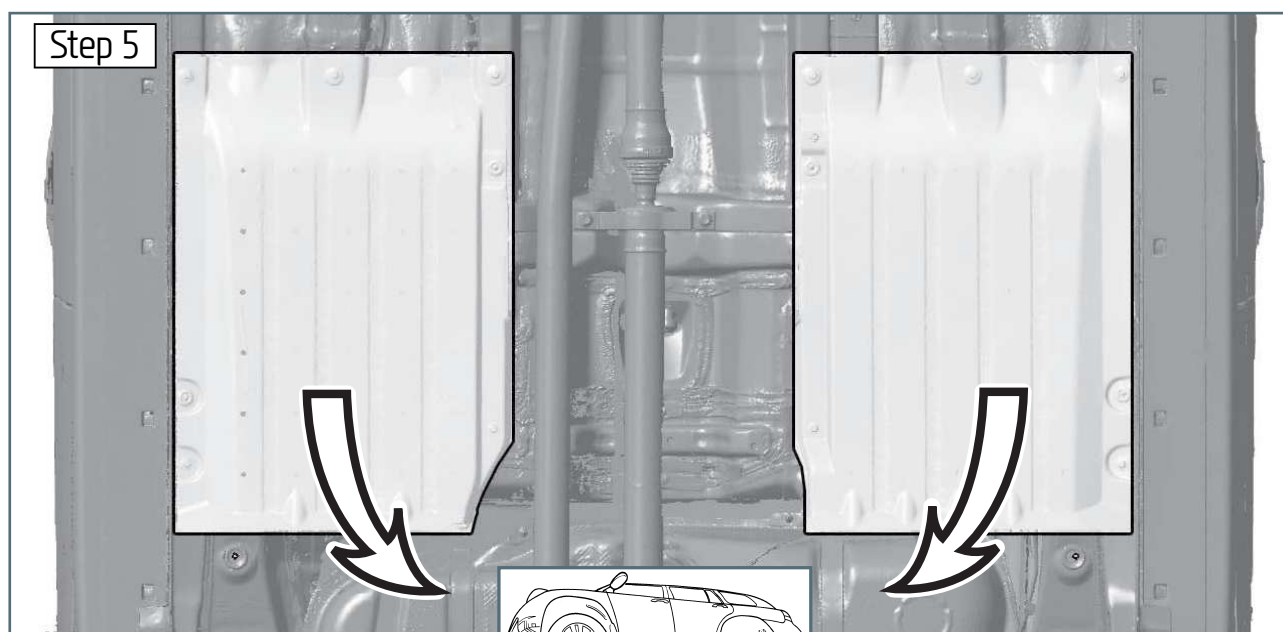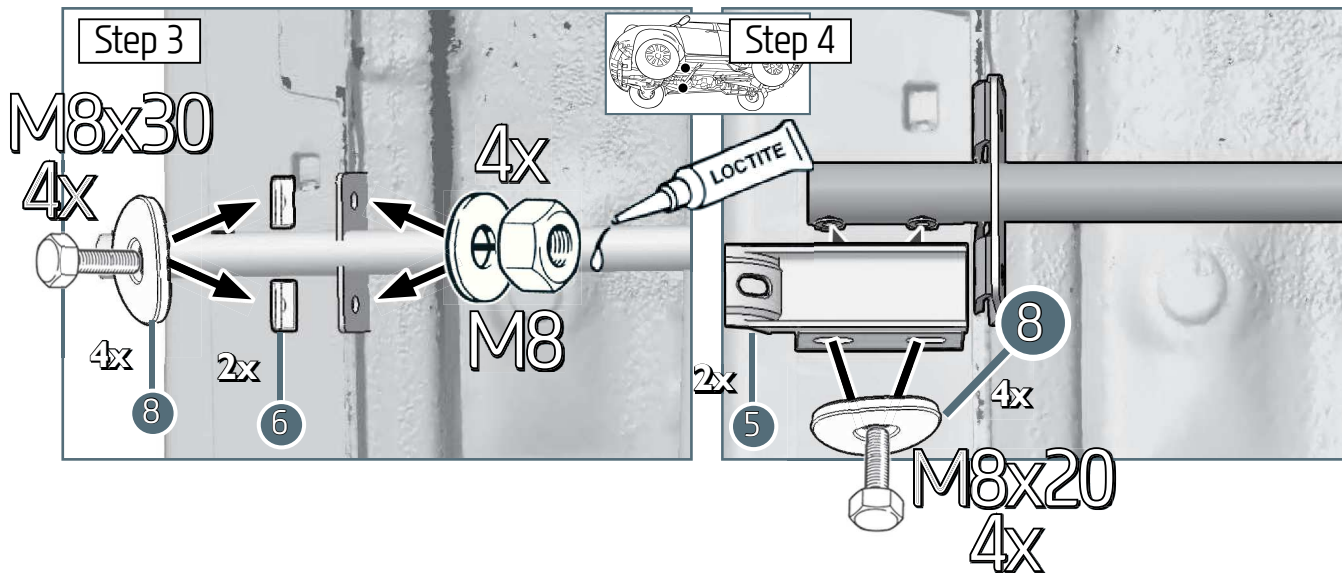

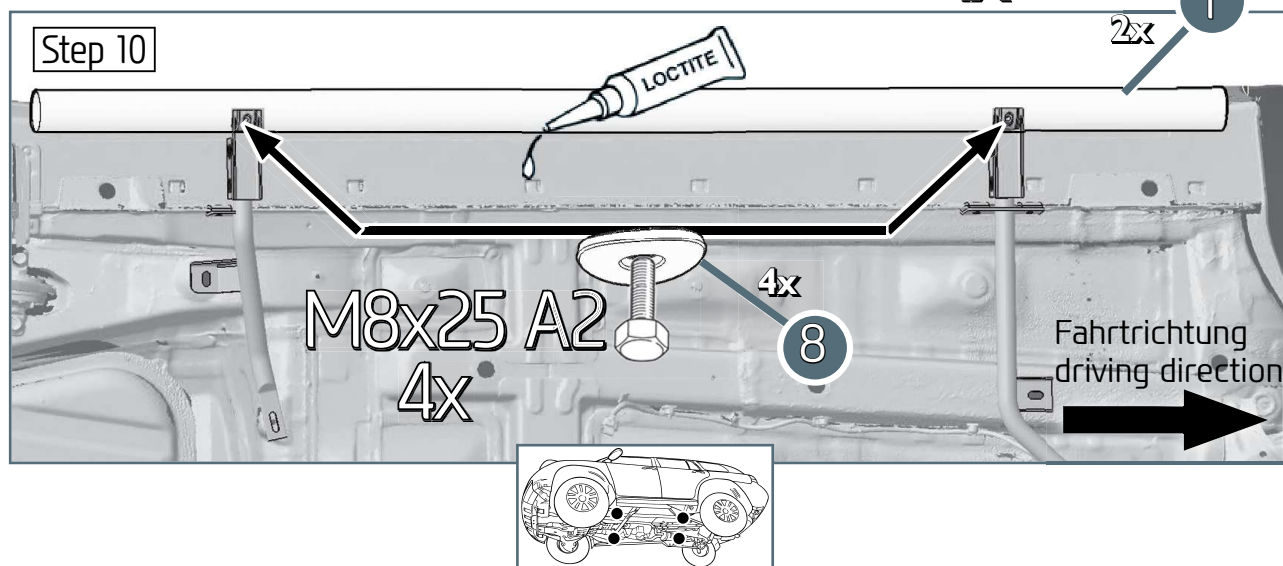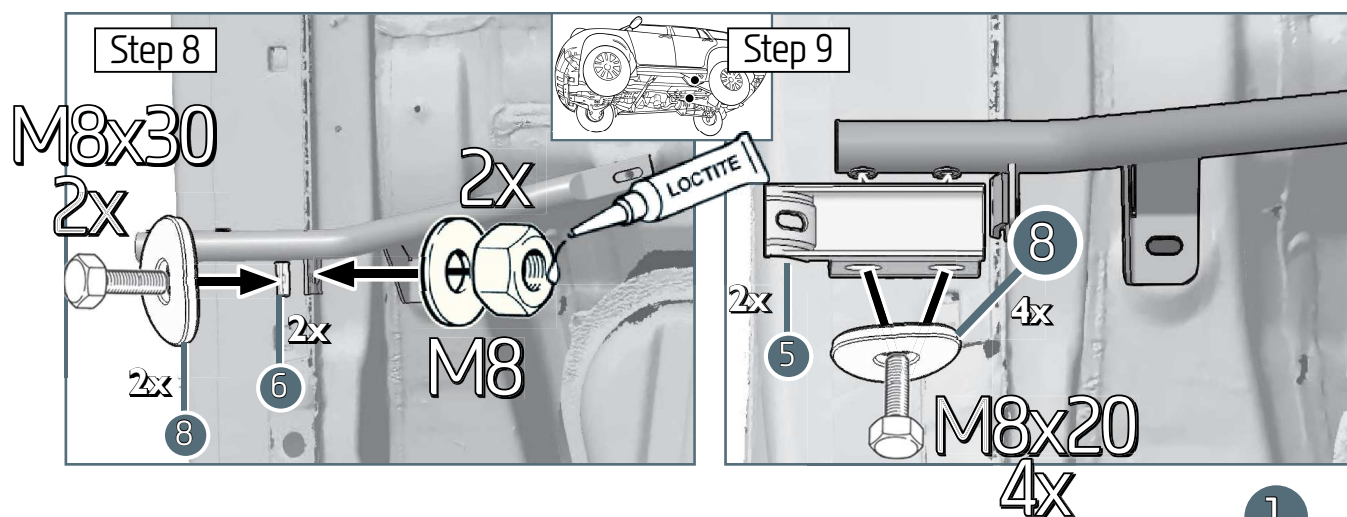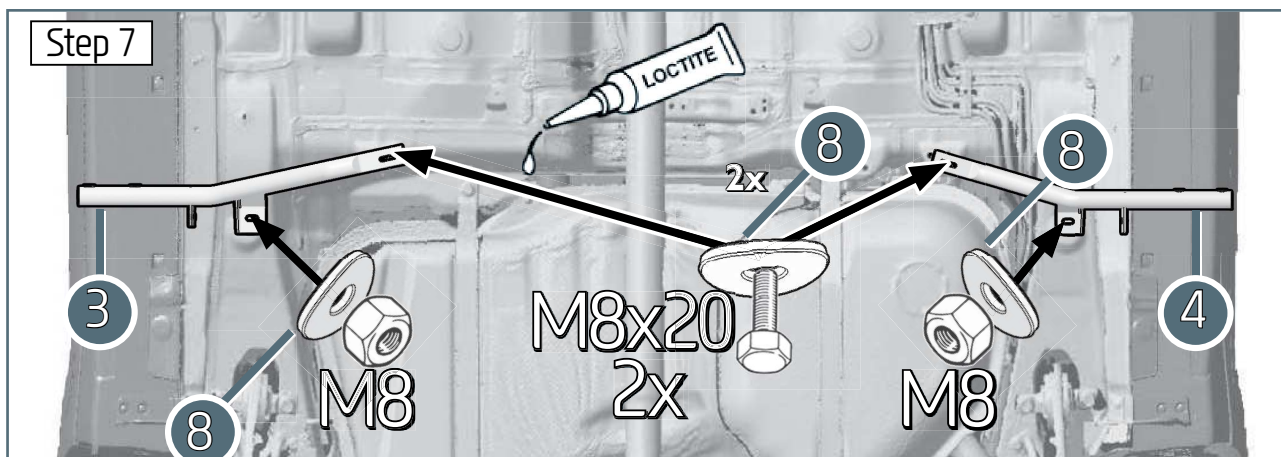

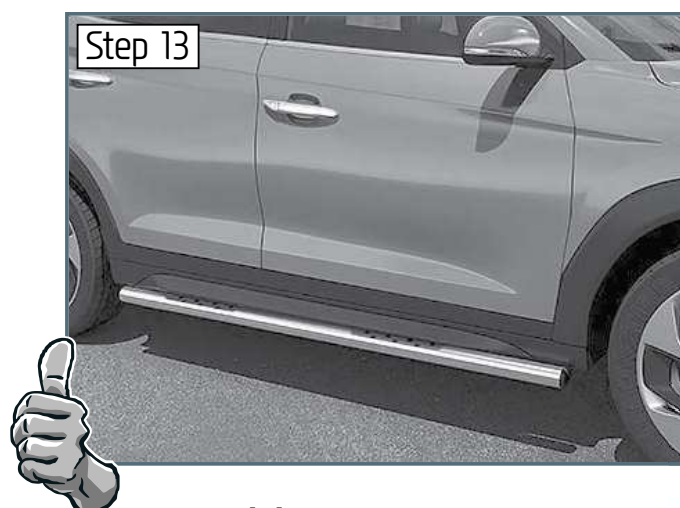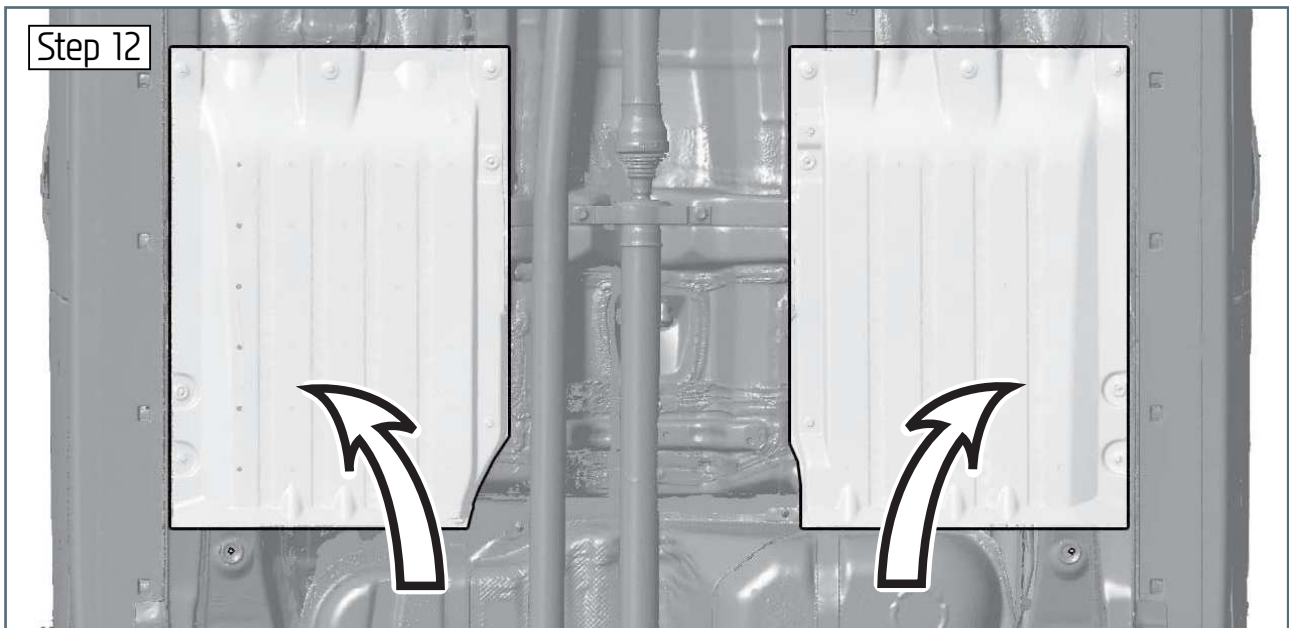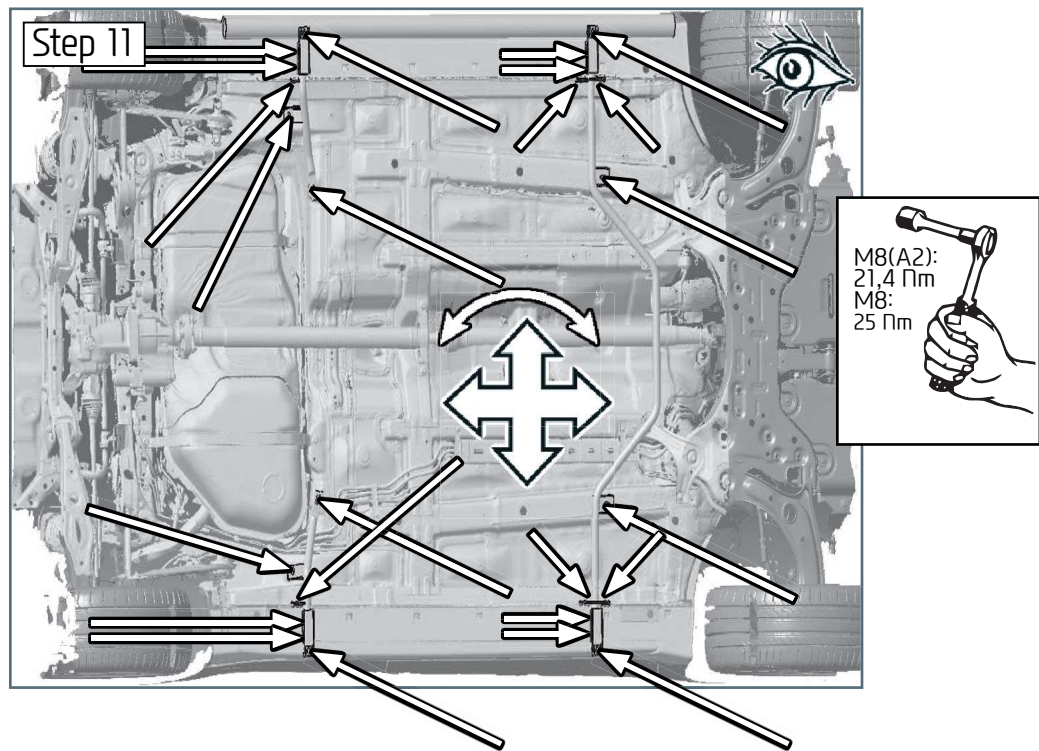

Revision 4: 12.02.2019

