

Part No. RRS-MR



strands[®]
-lighting division

ASSEMBLY INSTRUCTIONS RRS



THANKS A LOT!

Thank you for choosing products from strands lighting division. We have everything for work vehicles and you can find more information about our systems and products on our website strandseurope.com. Feel free to contact our sales staff at Worksystem.com if you have any questions.

KEEP IN MIND

Please read and understand all instructions before installing this product. By installing this roof bar, you assume full responsibility for its proper and secure attachment to your vehicle. Improper installation could result in damage to your car, the roof bar, or items being transported, and may cause injury. The manufacturer and seller are not liable for any damages or injuries that may occur due to incorrect installation or misuse of this product. Use this product at your own risk.


TOOL LIST

- Knife or scissors
- Hex key set
- Measure tape


All installation kits fit all positions. Choose the positions that suit your application best.




www.strands.se
www.strandseurope.com

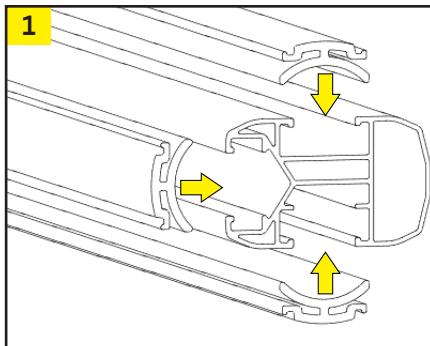


Take one roof bar & mount cover strip in all grooves.
Make sure that the strip is not stretched.

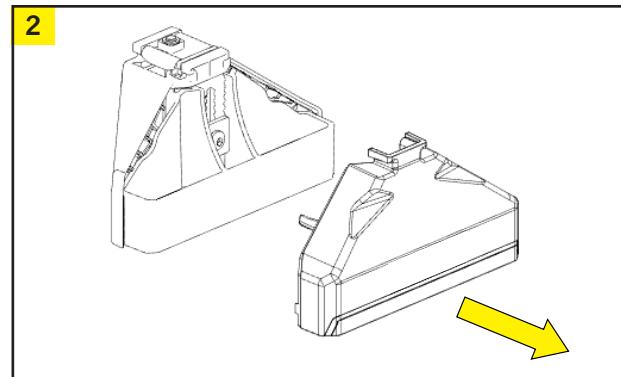

Take the foot set & remove the cover by
pulling straight out.

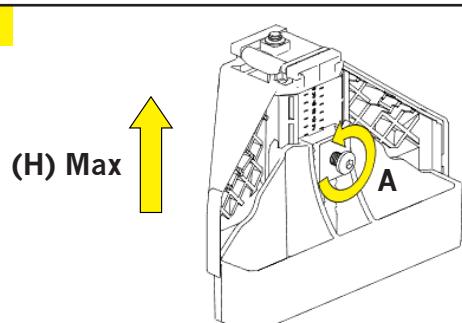


Loosen screw A on the front to raise the foot to the
highest setting.

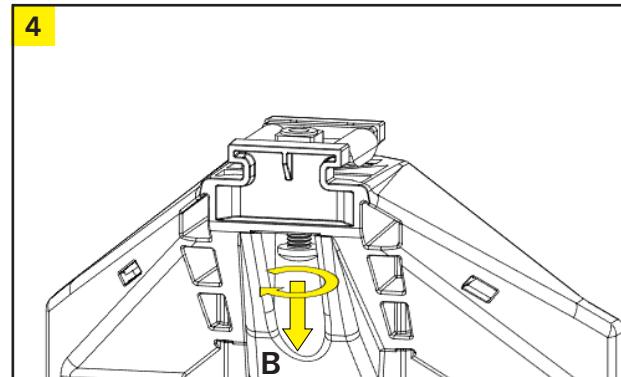


Loosen screw B on the back until flush with the nut on
the top side.


NOTE!

If you have bought lights with your
roof bar, see the mounting instruc-
tions for the lights now, as it will be
difficult to install them once the roof
bar is on the car's roof.

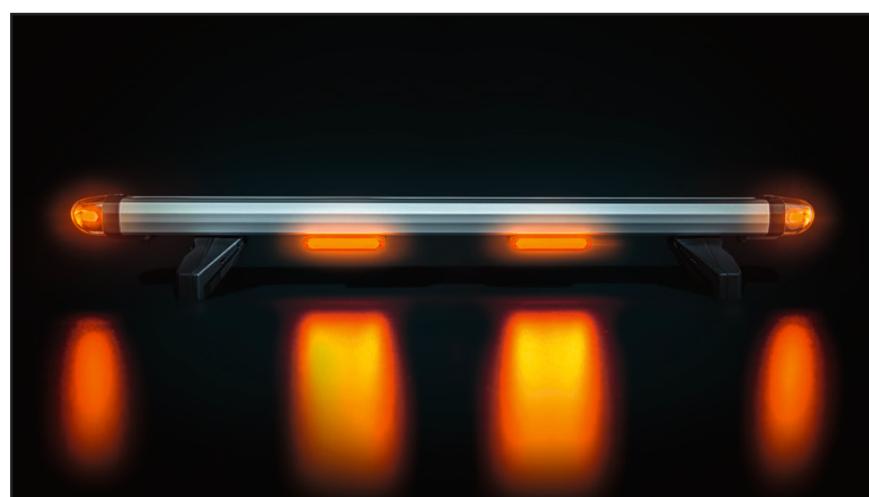


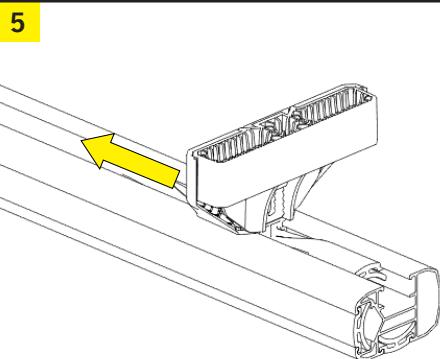


Apply soapy water on the lower cover strip to be able to easily slide the foot over it. Place the foot set about 10 cm in.

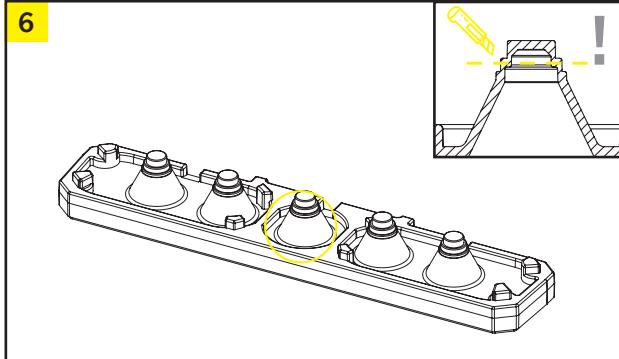


Prepare the distances & cut the bottom marking on the grommet in the center. Make sure the grommet follows the curvature of the roof as this may differ on some models

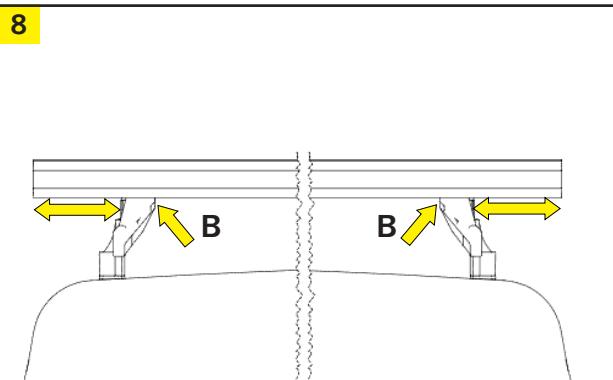


Measure so the roof bar is placed centered & tighten screw B on the back with 5Nm.

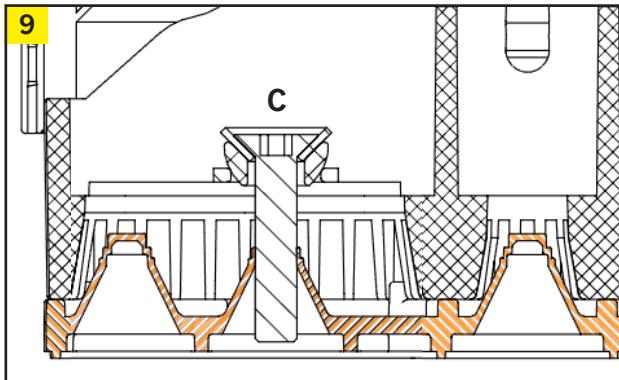


Check so the grommet is placed correctly and tighten screw C to 5 Nm.

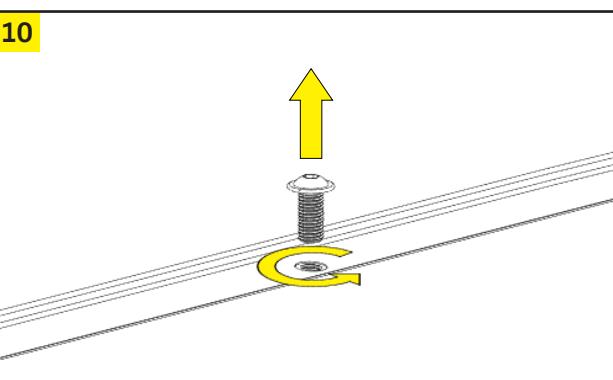


Remove the original screws.

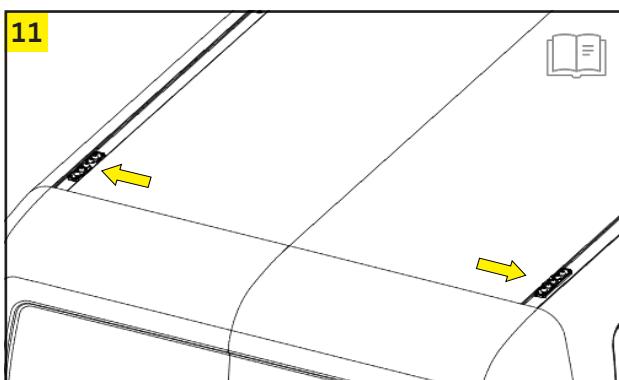


Place the mounting distances on respective placement according to the table on page 1.

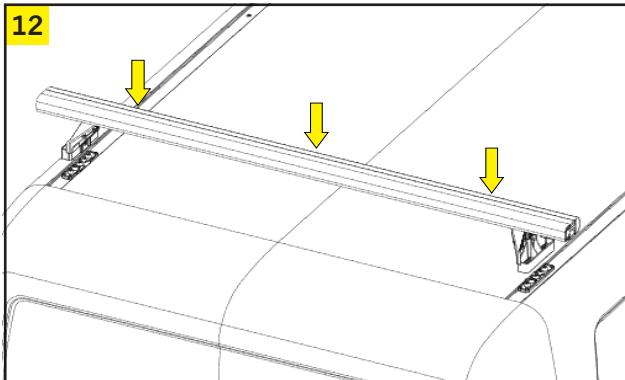


Place the roof bar on top of the distances.

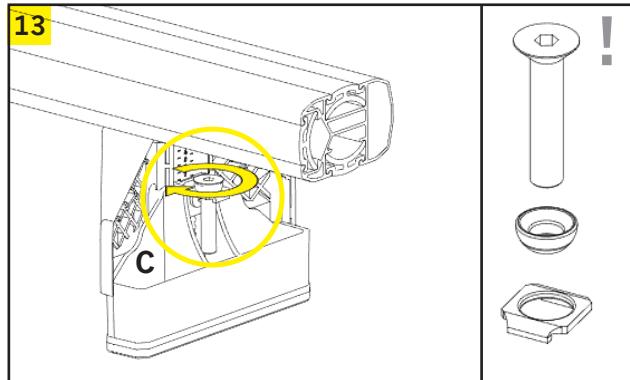


Take the screw, bushing & bracket through the foot & distance into the vehicle's fix-point.

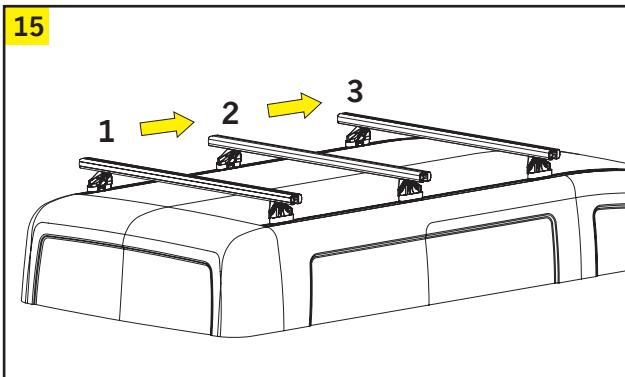


Repeat step 1-14 on all roof bars before moving further on.

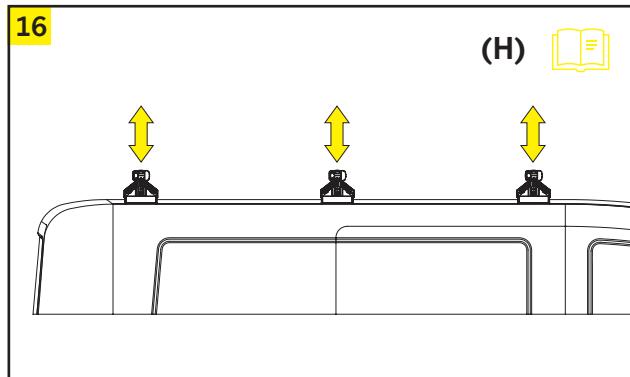

Depending on quantity & placement varies the height setting. See table on page 1 for different settings.

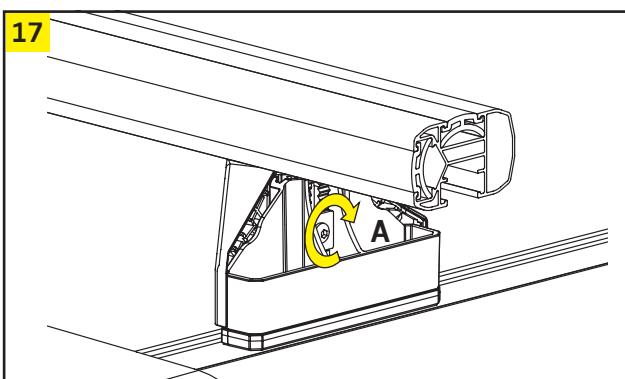

When the height is set correctly, tighten screw A with 5 Nm on all foot sets.

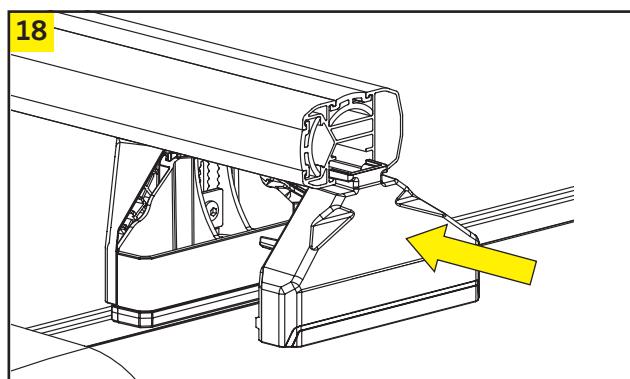

Mount the cover on all foot sets.

You have now finished the installation! Add any accessories you may need!